



ADDRESSZ 150




SPARE PARTS CATALOGUE

version: 24.11

E1

Crankcase Assembly

ADDRESSZ150

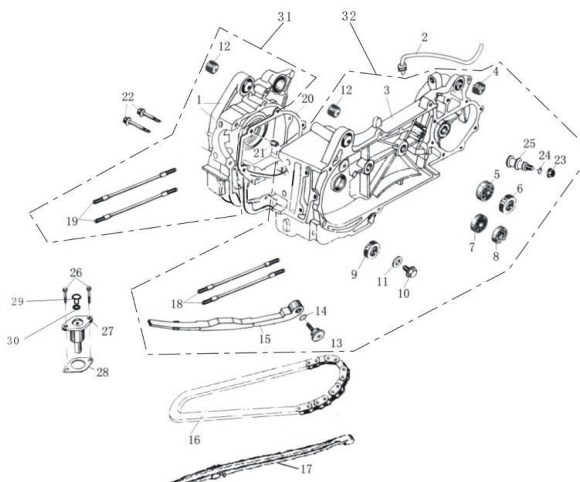

No.	Part Number	Description	Q'ty	Notes	Frame No.
1	2.20.05.03.02000	CRANKCASE, R.	1		
2	1.20.04.01.12000	TUBE, BREATH COMP.	1		
3	2.20.04.03.07000	CRANKCASE ASSY., L.	1		
4	1.20.04.01.08000	BUSH, REAR RUBBER	2		
5	1.00.01.6004-2RS	BEARING, 6004-2RS	1		
6	1.20.04.01.10000	OIL SEAL, OUTPUT SHAFT, 27X42X7	1		
7	1.00.01.6301	BEARING, 6301	1		
8	1.00.01.6002	BEARING, 6002	1		
9	1.20.04.01.13000	OIL SEAL, CRANKSHAFT, 9.8X30X5	1		
10	1.20.04.01.14000	BOLT, DRAIN, 12X1.5X14	1		
11	1.20.04.01.03000	WASHER, 12x24	1		
12	1.20.04.01.09000	BUSH, FRONT RUBBER	2		
13	1.20.13.01.01000	SCREW, CAM CHAIN TENSIONER	1		
14	1.20.13.01.02000	O-RING, 16X1.5	1		
15	1.20.13.01.05000	TENSIONER, CAM CHAIN	1		
16	1.20.13.01.04000	CHAIN, CAM	1		
17	1.20.13.01.06000	GUIDE COMP., CAM CHAIN	1		
18	1.20.04.01.04000	BOLT, STUB, M8X195.5	2		
19	1.20.05.01.01000	BOLT, STUB, M8X187.5	2		
20	1.20.04.01.05000	GASKET, R. CRANKCASE	1		
21	1.20.04.01.01000	PIN, DOWEL, Ø8X14	2		
22	1.05.01.09.0650	BOLT, M6X50	2		
23	1.05.04.01.0800	NUT, SM8	1		
24	1.20.04.01.11000	O-RING, 7.5X1.5	1		

E1

Crankcase Assembly


ADDRESSZ150

No.	Part Number	Description	Q'ty	Notes	Frame No.
25	1.20.04.01.02000	PIN, BRAKE	1		
26	1.05.01.09.0622	BOLT, M6X22	2		
27	1.20.13.01.07000	TENSIONER COMP.	1		
28	1.20.13.01.03000	GASKET, TENSIONER	1		
29	1.20.13.01.08000	SCREW, FLAT HEAD	1		
30	1.20.13.01.09000	O-RING, 9.5X1.5	1		
31	2.20.05.03.99000	R. CRANKCASE ASSY.	1		
32	2.20.04.03.99000	L. CRANKCASE ASSY.	1		

E2

Gear Box Cover Assembly

ADDRESSZ150

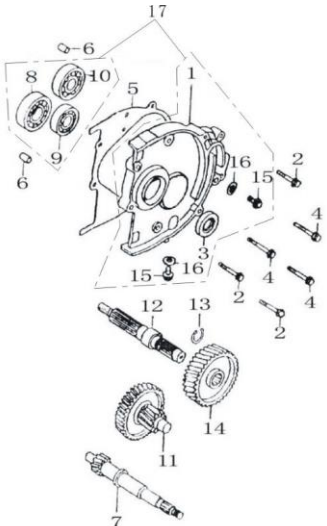

No.	Part Number	Description	Q'ty	Notes	Frame No.
1	2.20.20.01.01000	COVER, GEAR BOX	1		
2	1.05.01.09.0628	BOLT, M6X28	3		
3	1.20.20.01.08000	OIL SEAL, INPUT SHAFT, 20X32X6	1		
4	1.05.01.09.0635	BOLT, M6X35	3		
5	1.20.20.01.06000	GASKET, GEAR BOX COVER	1		
6	1.20.04.01.01000	PIN, DOWEL, Ø8x14	2		
7	1.20.20.01.02000	INPUT SHAFT, GEAR BOX	1		
8	1.00.01.6204	BEARING, 6204	1		
9	1.00.01.6202	BEARING, 6202	1		
10	1.00.01.6203	BEARING, 6203	1		
11	1.20.20.01.09000	COUNTER SHAFT COMP.	1		
12	1.20.20.01.05000	OUTPUT SHAFT, GEAR BOX (203.5)	1		
13	1.05.06.02.2000	CIRCLIP, SHAFT, 20	1		
14	1.20.20.01.03000	OUTPUT GEAR	1		
15	1.05.01.09.0812	BOLT, M8X12	2		
16	1.20.20.01.07000	WASHER	2		
17	2.20.20.01.99000	COVER ASSY., GEAR BOX	1		

E3

Left Crankcase Cover Assembly

ADDRESSZ150

No.	Part Number	Description	Q'ty	Notes	Frame No.
1	1.20.06.03.07000	GASKET, L. CRANKCASE COVER	1		
2	2.20.06.03.01000	L.CRANKCASE COVER	1	as in photo	
3	1.05.01.09.0665	BOLT, M6X65	2		
4	1.05.01.09.0640	BOLT, M6X40	6		
5	1.20.06.01.06001	CLAMP, BRAKE CABLE	1		
6	1.20.06.01.04000	CLAMP, CARB. DRAIN TUBE	1		
7	1.20.06.01.05000	HOLDER, THROTTLE CABLE	1		
8	1.20.04.01.01000	PIN, DOWEL, Ø8x14	2		
9	1.20.06.01.03000	PLATE, AIR VENT	1		
10	1.05.02.03.4208	SCEW, TAPPING, ST4.2x8	4		
11	1.20.17.01.05000	ARM ASSY., KICK STARTER	1		
12	1.05.01.08.0622	BOLT, M6X22	1		
13	1.20.06.01.10001	PIPE, AIR INLET COMP.	1		
14	1.20.06.01.08000	BRACKET, HOLDING	1		
15	1.05.01.09.0612	BOLT, M6X12	1		
16	2.20.06.03.99000	COVER ASSY., L. CRANKCASE	1		

E4

Right Crankcase Cover Assembly

ADDRESSZ150

No.	Part Number	Description	Q'ty	Notes	Frame No.
1	2.20.07.01.01000	COVER, R. CRANKCASE	1		
2	1.20.07.01.06000	GASKET, R. CRANKCASE COVER	1		
3	1.20.04.01.13000	OIL SEAL, 19.8X30X5	1		
4	1.20.04.01.01000	PIN, Ø8x14	2		
5	1.20.07.01.09000	SCREEN, OIL FILTER	1		
6	1.20.07.01.03000	SPRING, OIL FILTER SCREEN	1		
7	1.20.07.01.04000	O-RING, 30.5X3	1		
8	1.20.07.01.02000	SCEW CAP, OIL FILTER SCREEN	1		
9	1.05.01.09.0632	BOLT, M6X32	1		
10	1.05.01.09.0695	BOLT, M6X95	4		
11	1.05.01.09.06100	BOLT, M6X100	1		
12	1.05.01.09.06110	BOLT, M6X110	2		
13	1.20.07.01.08000	CLAMP, TRIGGER CABLE	1		
14	1.20.07.01.05000	GAUGE, OIL LEVEL	1		
15	1.20.07.01.07000	O-RING, 18X3	1		
16	1.05.01.09.0635	BOLT, M6X35	1		
17	2.20.07.01.99000	COVER ASSY., R. CRANKCASE	1		

E5

Cylinder Assembly

ADDRESSZ150


Exploded view diagram of a cylinder assembly. Part 1 is the cylinder assembly, part 2 is the gasket, part 3 shows two dowel pins, part 4 is a washer, and part 5 is a bolt. The diagram shows the gasket (2) being placed between the cylinder (1) and the base, with dowel pins (3) aligning the gasket. A washer (4) and bolt (5) are shown being used to secure the assembly.

No.	Part Number	Description	Q'ty	Notes	Frame No.
1	1.20.02.03.03000	CYLINDER ASSY.	1		
2	1.20.02.03.01000	GASKET, CYLINDER	1		
3	1.20.01.01.01000	PIN, DOWEL, Φ 10x16	2		
4	1.20.02.01.02000	WASHER, 6x12	1		
5	1.05.01.09.0612	BOLT, M6X12	1		

E6

Cylinder Head Assembly

ADDRESSZ150

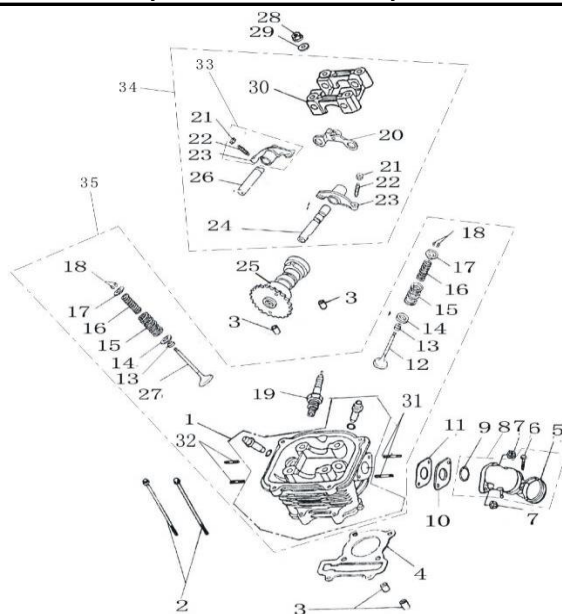

No.	Part Number	Description	Q'ty	Notes	Frame No.
1	2.20.01.03.13000	HEAD COMP., CYLINDER	1		
2	1.05.01.09.06100	BOLT, M6X100	2		
3	1.20.01.01.01000	PIN, DOWEL, Ø10x16	4		
4	1.20.01.03.15000	GASKET, CYLINDER HEAD	1		
5	1.20.01.01.16010	CLAMP, AIR INLET PIPE	1		
6	1.05.02.01.0425	BOLT, M4x25	1		
7	1.05.04.02.0600	NUT, M6	2		
8	1.20.01.01.16000	AIR INLET PIPE COMP.	1		
9	1.00.14.265180	O-RING, 26.5x1.8	1		
10	1.20.01.01.12000	INSULATOR	1		
11	1.20.01.01.11000	GASKET, INSULATOR	1		
12	1.20.01.03.06000	VALVE, INTAKE	1		
13	1.20.01.01.14000	SEAL , VALVE	2		
14	1.20.01.01.10000	WASHER	2		
15	1.20.01.01.09000	SPRING, VALVE OUTER	2		
16	1.20.01.01.08000	SPRING, VALVE INNER	2		
17	1.20.01.01.05000	RETAINER, VALVE SPRING	2		
18	1.20.01.01.07000	COTTER, VALVE	4		
19	1.20.01.01.17000	PLUG, SPARK	1		


E6


Cylinder Head Assembly

ADDRESSZ150

An exploded view diagram of a cylinder head assembly. The diagram shows various components labeled with numbers 1 through 35. Key parts include the cylinder head (1), intake and exhaust valves (27, 19), rocker arms (23, 24), camshaft (25), and various fasteners like nuts (21, 22, 28, 29), bolts (31, 32), and washers (3). The assembly is shown in a disassembled state to illustrate the relationship between parts.

No.	Part Number	Description	Q'ty	Notes	Frame No.
20	1.20.12.01.05000	STOPPER COMP.	1		
21	1.20.12.01.04020	NUT, ADJUSTING	2		
22	1.20.12.01.04030	BOLT, ADJUSTING	2		
23	1.20.12.01.04010	ROCKER ARM	2		
24	1.20.12.01.03000	SHAFT, INTAKE ROCKER ARM	1		
25	1.20.11.01.01000	CAMSHAFT ASSY.	1		
26	1.20.12.01.02000	SHAFT, EXHAUST ROCKER ARM	1		
27	1.20.01.03.04000	VALVE, EXHAUST	1		
28	1.05.04.02.0800	NUT, M8	4		
29	1.20.04.01.06000	WASHER, 8	4		
30	2.20.12.01.01000	HOLDER, CAMSHAFT	1		
31	1.20.01.01.03000	BOLT, STUB, M6X63	2		
32	1.20.01.01.02000	BOLT, STUB, M6X32	2		
33	1.20.12.01.04000	ROCKER ARM, VALVE	2		
34	2.20.12.01.99000	SEAT ASSY., CAMSHAFT	1		
35	2.20.01.03.99000	CYLINDER HEAD ASSY.	1		

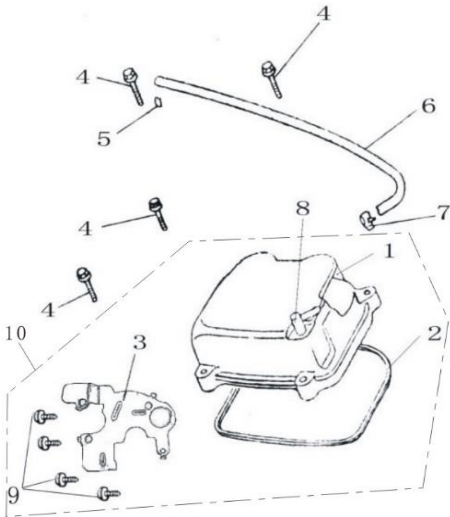E7	Cylinder Head Cover Assembly	ADDRESSZ150			
					
No.	Part Number	Description	Q'ty	Notes	Frame No.
1	2.20.03.01.01000	COVER, CYLINDER HEAD	1		
2	1.20.03.01.03000	GASKET, CYLINDER HEAD COVER	1		
3	1.20.03.01.02000	PLATE, CYLINDER HEAD COVER	1		
4	1.05.01.09.0622	BOLT, M6X22	4		
5	1.20.03.01.05010	CLIP, PIPE	1		
6	1.20.03.01.05000	PIPE COMP., BREATH	1		
7	1.20.03.01.05020	CLIP, PIPE	1		
8	1.20.03.01.04000	JUNCTION COMP., BREATH PIPE	1		
9	1.05.02.03.4208	SCREW, TAPPING, ST4.2X8	4		
10	2.20.03.01.99000	COVER ASSY., CYLINDER HEAD	1		

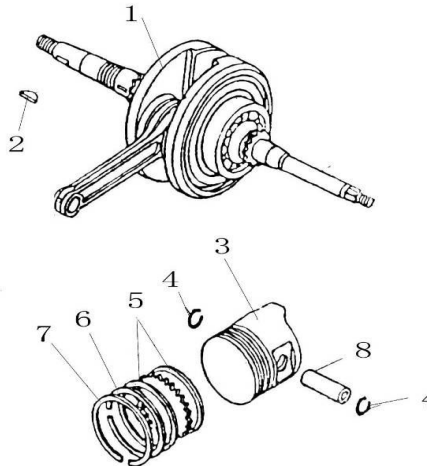E8	Crankshaft, Connecting Rod and Piston				ADDRESSZ150
					
No.	Part Number	Description	Q'ty	Notes	Frame No.
1	1.20.09.01.01000	CRANKSHAFT COMP.	1		
2	1.20.09.01.01010	KEY, WOODRUFF	1		
3	1.20.10.03.01000	PISTON	1		
4	1.20.10.01.04000	CIRCLIP, PISTON PIN	2		
5	1.20.10.03.02000	RING SET, PISTON	1		
6					
7					
8	1.20.10.03.03000	PISTON PIN	1		

E9

Electrical Starting Parts

ADDRESSZ150

No.	Part Number	Description	Q'ty	Notes	Frame No.
1	1.20.18.01.01000	MOTOR ASSY., STARTER	1		
2	1.05.01.09.0616	BOLT, M6X16	2		
3	1.20.18.01.02000	GEAR SHAFT	1		
4	1.20.18.01.03000	GEAR, STARTER REDUCTION	1		
5	1.20.09.01.01010	KEY, WOODRUFF	1		
6	1.20.19.03.01020	CLUTCH COMP.	1		
7	1.20.19.01.01040	NEEDLE BEARING	1		
8	1.20.19.03.01030	GEAR COMP., STARTING CLUTCH	1		
9	1.20.19.01.03000	WASHER	1		
10	1.20.19.01.02000	LOCK NUT, SM22X1 L.	1		
11	1.20.19.03.01000	CLUTCH ASSY., STARTING	1		

E10

Driving and Driven Pulley Assembly

ADDRESSZ150

No.	Part Number	Description	Q'ty	Notes	Frame No.
1	1.20.22.03.02000	BELT, DRIVE	1		
2	1.20.17.01.04000	STARTING GEAR	1		
3	1.20.21.01.01060	PIECE, SLIDE	3		
4	1.20.21.01.01050	PLATE, RAMP	1		
5	1.20.21.01.01040	WEIGHT, ROLLER	6		
6	1.20.21.01.01030	FACE, MOVABLE DRIVE	1		
7	1.20.21.01.01020	BOSS, DRIVE FACE	1		
8	1.20.21.01.01010	FACE, DRIVE	1		
9	1.05.05.04.1200	WASHER, 12.3x29x2.5	1		
10	1.05.04.10.1213	NUT, M12x1.25 H=10	1		
11	1.20.22.01.01000	PULLEY ASSY., DRIVEN	1		
12	1.20.22.01.01070	COLLAR, SPRING	1		
13	1.20.22.01.01040	SPRING, DRIVEN FACE	1		
14	1.20.22.01.01010	COLLAR, SEAL	1		
15	1.20.22.01.01090	FACE SET, MOVING DRIVEN	1		
16	1.20.22.01.01120	FACE SET, DRIVEN	1		
17	1.05.06.04.0700	CIRCLIP, 7	3		
18	1.20.22.01.01080	PLATE, CLUTCH	1		
19	1.20.22.01.01060	SPRING, CLUTCH	3		

E10


Driving and Driven Pulley Assembly

ADDRESSZ150

No.	Part Number	Description	Q'ty	Notes	Frame No.
20	1.20.22.01.01140	SHOE, CLUTCH	3		
21	1.20.22.01.01130	DAMPER	3		
22	1.20.22.01.01160	DRIVE PLATE COMP.	1		
23	1.20.22.01.01050	NUT	1		
24	1.20.22.01.01150	HOUSING, CLUTCH	1		
25	1.05.05.04.1200	WASHER, 12.3x29x25	1		
26	1.05.04.10.1212	NUT, M12x1.25 H=8	1		
27	1.20.21.01.01000	PULLEY ASSY., DRIVE	1		

E11	Generator Parts, Oil Pump Parts			ADDRESSZ150	
No.	Part Number	Description	Q'ty	Notes	Frame No.
1	1.05.01.09.0618	BOLT, FLANGE, M6X18	4		
2	1.20.24.01.06000	FAN COMP., COOLING	1		
3	1.05.04.10.1213	NUT, M12x1.25 H=10	1		
4	1.05.05.04.1201	WASHER, PLAIN, 12-14 HV	1		
5	1.20.16.01.01021	FLYWHEEL COMP. (DC 8 POLES)			
6	1.05.01.09.0620	BOLT, FLANGE, M6X20	2		
7	1.05.01.08.0512	BOLT, M5X12	2		
8	1.20.14.01.03000	OIL PUMP ASSY.	1		
9	1.05.01.09.0625	BOLT, M6X25	2		
10	1.20.14.01.01000	SPROCKET, OIL PUMP DRIVEN	1		
11	1.05.04.02.0600	NUT, M6	1		
12	1.20.14.01.04000	CHAIN, OIL PUMP	1		
13	1.20.14.01.02000	SEPARATOR, OIL	1		
14	1.05.01.09.0612	BOLT, M6X12	2		
15	1.20.16.01.01011-AC	STATOR COMP.	1		
16	1.20.16.01.01001-AC	GENERATOR ASSY.	1		

E12	Kick Starting Parts				ADDRESSZ150
No.	Part Number	Description	Q'ty	Notes	Frame No.
1	1.20.17.01.01010	BUSH II	1		
2		PIN	1		
3	1.20.17.01.01050	SPINDLE COMP., KICK STARTER	1		
4	1.20.17.01.01020	SPRING, KICK STARTER SPINDLE	1		
5	1.20.17.01.01030	WASHER	1		
6	1.20.17.01.01040	BUSH I	1		
7	1.20.17.01.02000	PLATE, SPRING	1		
8	1.05.01.09.0614	BOLT, M6X14	1		
9	1.20.17.01.03030	SHAFT COMP., STARTER IDLE	1		
10	1.05.08.02.0308	PIN, A3x8	1		
11	1.20.17.01.03020	SPRING, COMP.RESSION	1		
12	1.20.17.01.03050	CLIP	1		
13	1.20.17.01.03040	WASHER, ADJUST	1		
14	1.20.17.01.03010	BEVEL WHEEL	1		
15	1.20.17.01.03000	WHEEL ASSY., STARTER IDLE	1		
16	1.20.17.01.01000	SPINDLE ASSY., KICK STARTER	1		

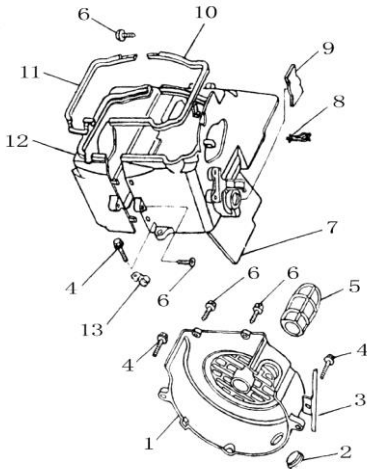E13	Shroud Parts			ADDRESSZ150	
					
No.	Part Number	Description	Q'ty	Notes	Frame No.
1	1.20.24.01.03000	COVER COMP., FAN	1	see photo	
2	1.20.24.01.03020	CAP, HOLE	1		
3	1.20.24.01.04000	CLAMP, CABLE	1		
4	1.05.01.09.0625	BOLT, M6X25	3		
5	1.20.24.01.03010	GUIDE TUBE , COOLING	1		
6	1.05.02.15.4816	SCREW, TAPPING, ST4.8X16-F-H	4		
7	1.20.24.01.01020	SHROUD COMP., UPPER	1		
8	1.20.24.01.01040	CLIP, HIGH TENSION CABLE	1		
9	1.20.24.01.01030	COVER, RUBBER	1		
10	1.20.24.01.01010	SEAL, UPPER SHROUD	1		
11	1.20.24.01.02020	SEAL, LOWER SHROUD	1		
12	1.20.24.01.02000	SHROUD COMP., LOWER	1		
13	1.20.24.01.05000	CLAMP, CARB. DRAIN TUBE	1		

E14

Rear Brake Assembly

ADDRESSZ150

The diagram shows an exploded view of a rear brake assembly. The central component is the rear brake shoe assembly (1). To its left is a coiled spring (8). Below the spring is a swing arm (6) with a bolt (7) passing through it. To the right of the shoe assembly is a camshaft (3) and a small O-ring (5). Below the camshaft is a cover (4) and a plate (10). At the bottom right is a swing arm cover assembly (11). The numbers 1 through 11 are placed next to their respective parts.

No.	Part Number	Description	Q'ty	Notes	Frame No.
1	1.20.30.03.01020	SHOES COMP., REAR BRAKE	2		
2	1.20.30.03.01010	SPRING, SHOE	2		
3	1.20.30.01.04000	CAMSHAFT, RR. BRAKE	1		
4	1.20.30.01.03020	COVER, SWING ARM, RR. BRAKE	1		
5	1.20.30.01.05000	O-RING, 11.3x1.3	1		
6	1.20.30.01.02000	SWING ARM, RR. BRAKE	1		
7	1.05.01.09.0632	BOLT, M6x32	1		
8	1.20.30.01.06000	SPRING, BRAKING	1		
9	1.20.30.03.01000	REAR BRAKE ASSY.	1		
10	1.20.30.01.03010	PLATE, SWING ARM COVER	1		
11	1.20.30.01.03000	COVER ASSY., SWING ARM	1		

E15

Carburetor Assembly

ADDRESSZ150

An exploded view diagram of a carburetor assembly. The diagram shows various components separated to show their assembly relationship. Numbered parts include: 1. Piston valve screw, 2. Piston valve plate, 3. Piston valve spring, 4. Main needle screw, 5. Main needle plate, 6. Main needle, 7. Piston valve, 8. Main nozzle, 9. Slow jet, 10. Main jet pipe, 11. Main jet, 12. Needle valve, 13. Float pin, 14. Float, 15. Fuel cup washer, 16. Fuel cup, 17. Fuel cup screws, 18. O-ring, 19. Drain screw, 20. Fuel pipe, 21. Fuel pipe clip, 22-32. Various internal jets, needles, and seals, 33-40. Throttle cable and linkage components, 41-49. Various gaskets, O-rings, and small pins, 50. Throttle cable. The diagram is a technical line drawing with clear part numbering for identification.

No.	Part Number	Description	Q'ty	Notes	Frame No.
1	1.20.23.01.01010	SCREW, PISTON VALVE	2		
2	1.20.23.01.01020	PLATE, PISTON VALVE	1		
3	1.20.23.01.01030	SPRING, PISTON VALVE	1		
4	1.20.23.01.01040	SCREW, MAIN NEEDLE	1		
5	1.20.23.01.01050	PLATE, MAIN NEEDLE	1		
6	1.20.23.03.01060	MAIN NEEDLE	1		
7	1.20.23.01.01070	PISTON VALVE	1		
8	1.20.23.03.01080	NOZZLE, MAIN	1		
9	1.20.23.03.01090	JET, SLOW	1		
10	1.20.23.03.01100	PIPE, MAIN JET	1		
11	1.20.23.03.01110	JET, MAIN	1		
12	1.20.23.01.01120	NEEDLE VALVE	1		
13	1.20.23.01.01130	PIN , FLOAT	1		
14	1.20.23.01.01140	FLOAT	1		
15	1.20.23.01.01150	WASHER, FUEL CUP	1		
16	1.20.23.01.01160	FUEL CUP	1		
17	1.20.23.01.01170	SCREW, FUEL CUP	4		
18	1.20.23.01.01180	O-RING	1		
19	1.20.23.01.01190	SCREW, DRAIN	1		
20	1.20.23.01.01200	FUEL PIPE	3		
21	1.20.23.01.01210	CLIP, FUEL PIPE	5		

E15


Carburetor Assembly

ADDRESSZ150

An exploded view diagram of a carburetor assembly. The diagram shows various components separated to illustrate their assembly relationship. Key parts include: 1. Air cutoff valve assembly (parts 1-7). 2. Main carburetor body (parts 8-19). 3. Auto choke unit (parts 20-40). 4. Throttle lever assembly (parts 41-49). 5. Various screws, springs, and seals (parts 22-42). The diagram is labeled with numbers 1 through 50, corresponding to the parts list below.

No.	Part Number	Description	Q'ty	Notes	Frame No.
22	1.20.23.01.01220	SCREW, AIR CUTOFF VALVE	2		
23	1.20.23.01.01230	COVER, AIR CUTOFF VALVE	1		
24	1.20.23.01.01240	SPRING, AIR CUTOFF VALVE	1		
25	1.20.23.01.01250	RUBBER DIAPHRAGM, AIR CUTOFF VALVE	1		
26	1.20.23.01.01260	PIPE HOLDER	1		
27	1.20.23.01.01270	THREE-WAY PIPE	1		
28	1.20.23.01.01280	SCREW, STEEL PIECE	2		
29	1.20.23.01.01290	PIECE, COPPER	1		
30	1.20.23.01.01300	SCREW, SLOW SPEED	1		
31	1.20.23.01.01310	SPRING, SLOW SPEED	1		
32	1.20.23.01.01320	RIVET, THROTTLE LEVER SEAT	1		
33	1.20.23.01.01330	RUBBER RING, AUTO CHOKE UNIT SEAT	3		
34	1.20.23.01.01340	SHELL, AUTO CHOKE UNIT	1		
35	1.20.23.01.01350	ELECTRIC AUTO CHOKE UNIT	1		
36	1.20.23.01.01360	SCREW, MOUNTING PLATE	2		
37	1.20.23.01.01370	MOUNTING PLATE	1		
38	1.20.23.01.01380	RUBBER RING	1		
39	1.20.23.01.01390	SEAT, AUTO CHOKE UNIT	1		
40	1.20.23.01.01400	SCREW, AUTO CHOKE UNIT SEAT	2		
41	1.20.23.01.01410	SCREW, SLOW-SPEED ADJUSTING	1		
42	1.20.23.01.01420	PLUG, THROTTLE LEVER	1		

E15	Carburetor Assembly	ADDRESSZ150
-----	---------------------	-------------

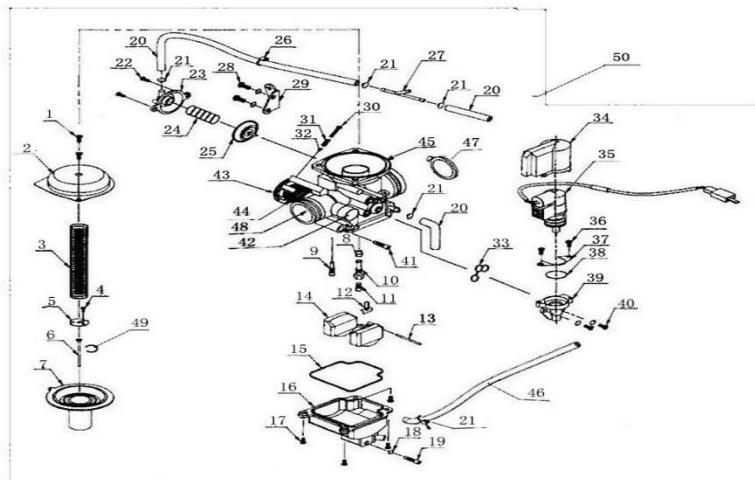

No.	Part Number	Description	Q'ty	Notes	Frame No.
43	1.20.23.01.01430	THROTTLE LEVER ASSY.	1		
44	1.20.23.01.01440	SPRING, THROTTLE LEVER	1		
45	1.20.23.03.01450	CARBURETOR ASSY.	1		
46	1.20.23.01.01460	TUBE COMP., DRAIN	1		
47	1.20.23.01.01470	COVER, DUSTPROOF	1		
48	1.20.23.01.01480	THROTTLE COMP.	1		
49	1.20.23.01.01490	CLIP	1		
50	1.20.23.03.01000	CARBURETOR ASSY.	1		

FRAME PARTS FOR Address150Z

No		Part Number	English Description	Qty	Unit
1		YB150T-37-V150-001	engine assy	1	SET
2		YB150T-37-V150-002	carburetor	1	UNIT
3		YB150T-37-V150-003	EXHAUST ASSY	1	UNIT
4		YB150T-37-V150-004	AIR FILTER COMP.	1	UNIT
5		YB150T-37-V150-005	lock assy	1	SET
6		YB150T-37-V150-006	SEAT LOCK CABLE	1	UNIT
7		YB150T-37-V150-007	main stand	1	UNIT
8		YB150T-37-V150-008	CENTER STAND CUSHION RUBBER	1	UNIT
9		YB150T-37-V150-009	SPRING,CENTER STAND	1	UNIT
10		YB150T-37-V150-010	side stand	1	UNIT
11		YB150T-37-V150-011	SIDE STAND CUSHION RUBBER	1	UNIT
12		YB150T-37-V150-012	SWITCH OF SIDE STAND	1	UNIT
13		YB150T-37-V150-013	SPRING OF SIDE STAND	1	UNIT
14		YB150T-37-V150-014	BRACKET ENGINE HANGER	1	SET
15		YB150T-37-V150-015	Steering column	1	UNIT
16		YB150T-37-V150-016	bearing sets	1	SET
17		YB150T-37-V150-017	front absorber	1	UNIT
18		YB150T-37-V150-018	rear absorber	1	UNIT
19		YB150T-37-V150-019	rear carrier	1	UNIT
20		YB150T-37-V150-021	fuel tank	1	UNIT
21		YB150T-37-V150-022	fuel tank sensor	1	UNIT
22		YB150T-37-V150-023	LOCK COMP FUAL TANK	1	UNIT
23		YB150T-37-V150-024	FUEL PETCOCK	1	UNIT
24		YB150T-37-V150-025	FILTER ASSY	1	UNIT

FRAME PARTS FOR Address150Z

No		Part Number	English Description	Qty	Unit
25		YB150T-37-V150-026	CLIP	1	UNIT
26		YB150T-37-V150-027	FUEL TANK PIPE SET	1	SET
27		YB150T-37-V150-028	Main cable	1	UNIT
28		YB150T-37-V150-029	flasher	1	UNIT
29		YB150T-37-V150-033	Relay assy	1	UNIT
30		YB150T-37-V150-034	High voltage wire assy	1	UNIT
31		YB150T-37-V150-035	CDI	1	UNIT
32		YB150T-37-V150-036	HORN	1	UNIT
33		YB150T-37-V150-037	REGULATOR	1	UNIT
34		YB150T-37-V150-038	FRONT RIM 2.15×10	1	UNIT
35		YB150T-37-V150-039	FRONT BRAKE PLATE	1	UNIT
36		YB150T-37-V150-040	VALVE SPOKE(CAP)	1	UNIT
37		YB150T-37-V150-041	BOLT,FRONT BRAKE DISC	3	UNIT
38		YB150T-37-V150-042	FRONT TYRE (90/90-10)	1	UNIT
39		YB150T-37-V150-043	SPEEDOMETER GEAR	1	UNIT
40		YB150T-37-V150-044	SPEEDOMETER CABLE	1	UNIT
41		YB150T-37-V150-045	MILEAGE CLAMP	1	UNIT
42		YB150T-37-V150-046	clip ,front disc brake cable	1	UNIT
43		YB150T-37-V150-047	REAR RIM 2.15×10	1	UNIT
44		YB150T-37-V150-048	brake shoes	1	UNIT
45		YB150T-37-V150-049	VALVE SPOKE(CAP)	1	UNIT
46		YB150T-37-V150-050	REAR TYRE(3.50-10)	1	UNIT
47		YB150T-37-V150-051	CONNECTING PLATE	1	UNIT
48		YB150T-37-V150-052	LONG BUSHING, CONNECTING PLATE	1	UNIT
49		YB150T-37-V150-053	SHORT BUSHING, CONNECTING PLAT	1	UNIT

FRAME PARTS FOR Address150Z

No		Part Number	English Description	Qty	Unit
50		YB150T-37-V150-054	SEAT ASSY	1	SET
51		YB150T-37-V150-055	frame	1	UNIT
52		YB150T-37-V150-056	HANDLEBAR	1	UNIT
53		YB150T-37-V150-057	THROTTLE CABLE	1	UNIT
54		YB150T-37-V150-058	REAR BRAKE CABLE	1	UNIT
55		YB150T-37-V150-059	LEFT GRIP	1	UNIT
56		YB150T-37-V150-060	REAR BRAKE LEVER	1	UNIT
57		YB150T-37-V150-061	ACCELERATOR HOLDER	1	UNIT
58		YB150T-37-V150-062	RIGHT GRIP	1	UNIT
59		YB150T-37-V150-063	rear mirror sets	1	UNIT
60		YB150T-37-V150-064	beam button	1	UNIT
61		YB150T-37-V150-065	signal light button	1	UNIT
62		YB150T-37-V150-067	horn button	1	UNIT
63		YB150T-37-V150-068	start button	1	UNIT
64		YB150T-37-V150-069	wind shield	1	UNIT
65		YB150T-37-V150-070	Front Cover	1	UNIT
66		YB150T-37-V150-072	decorative plates	1	UNIT
67		YB150T-37-V150-073	speedometer cover	1	UNIT
68		YB150T-37-V150-073-N	new speedometer cover	1	UNIT
68		YB150T-37-V150-074	Foot board	1	UNIT
69		YB150T-37-V150-075	Frame unbercover	1	UNIT
70		YB150T-37-V150-076	battery box cover	1	UNIT
71		YB150T-37-V150-077	rear fender	1	UNIT
72		YB150T-37-V150-080	Left front Cover, Luggage Cabinet	1	UNIT
73		YB150T-37-V150-081	right front Cover, Luggage Cabinet	1	UNIT

FRAME PARTS FOR Address150Z

No		Part Number	English Description	Qty	Unit
74		YB150T-37-V150-082	front Cover,Luggage Cabinet	1	UNIT
75		YB150T-37-V150-083	tool box	1	UNIT
76		YB150T-37-V150-084	small cap,Left front Cover,Luggage Cabinet	1	UNIT
77		YB150T-37-V150-085	Anti-theft lock fixed base	1	UNIT
78		YB150T-37-V150-086	Luggage Cabinet	1	UNIT
79		YB150T-37-V150-087	REAR FENDER	1	UNIT
80		YB150T-37-V150-089	front singal lihgt,left	1	UNIT
81		YB150T-37-V150-090	front singal lihgt,right	1	UNIT
82-1		YB150T-37-V150-091-LED	headlight LED	1	UNIT
82-2		YB150T-37-V150-091	headlight	1	UNIT
83		YB150T-37-V150-092	taillight	1	ASSY
84-2		YB150T-37-V150-093-LCD	speedometer digital	1	UNIT
84		YB150T-37-V150-093	speedometer	1	UNIT
85		YB150T-37-V150-094	pedal	1	UNIT
86		YB150T-37-V150-095	licence plate holder	1	UNIT
87		YB150T-37-V150-096	rear Reflector	1	UNIT
88		YB150T-37-V150-097	side Reflector	1	UNIT
89		YB150T-37-V150-098	FRONT DISC BRAKE ASSEMBLY	1	ASSY
90		YB150T-37-V150-099	NAMEPLATE	1	UNIT
91		YB150T-37-V150-100	LABEL SET	1	SET
92		YB150T-37-V150-101	battery	1	SET

FRAME PARTS FOR Address150Z

No		Part Number	English Description	Qty	Unit
93		YB150T-37-V150-102	TOOLS	1	SET
94			IRON REAR CARRIER	1	UNIT
95		YB150T-37-V150-019	Rear GRIP		
96			Left crankcase cover		
97		YB150T-37-V150-003-1	Muffler cover		
98		YB150T-37-V150-112-N	USB		