



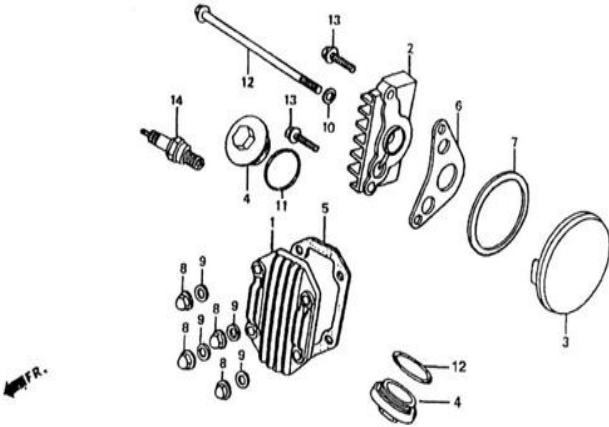
ENZO110

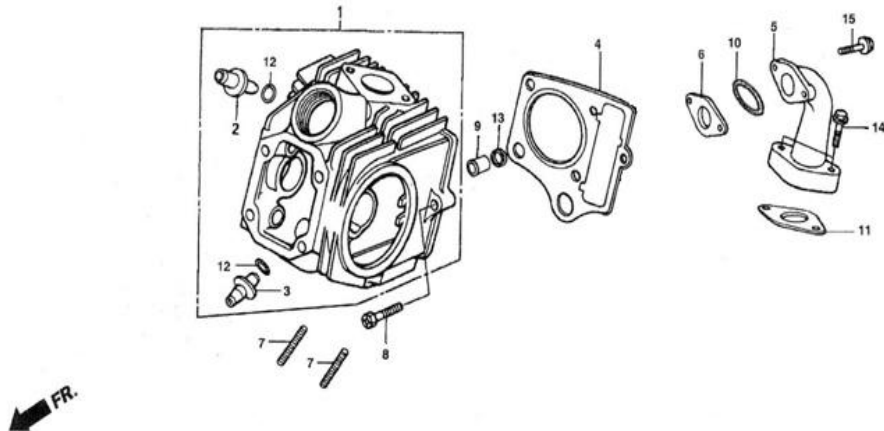


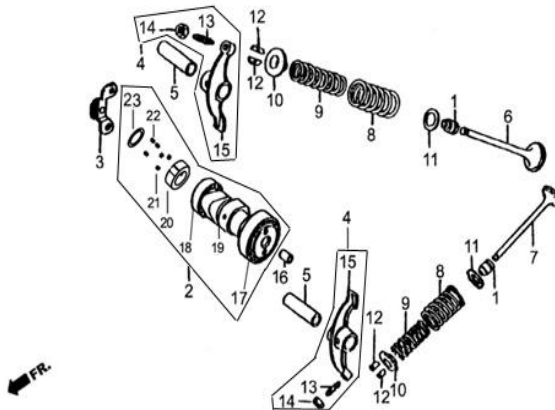
- Negro Mate
- Blanco
- Rojo Mate

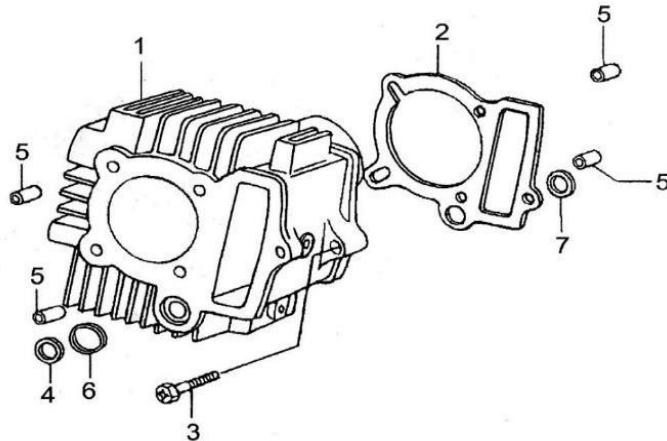
SPARE PARTS CATALOGUE

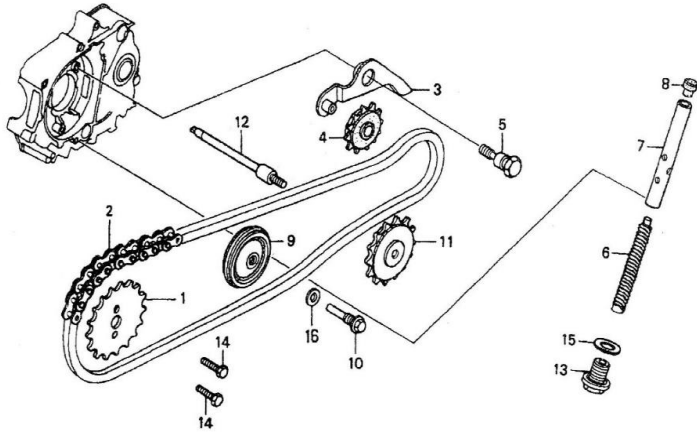
ver. 24.09

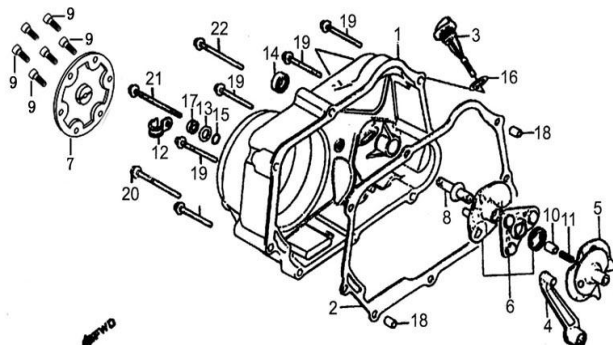
E-1	CYLINDER HEAD COVER				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	EG001-50006	COVER, CYLINDER HEAD	1		
2	EG001-50008	COVER, R.CYLINDER HEAD SIDE	1		
3	EG001-50007	COVER, L.CYLINDER HEAD SIDE	1		
4	EF001-50009	CAP, TAPPET ADJUSTING HOLE	2		
5	EG001-50014E	GASKET,CYLINDER HEAD COVER	1		
6	EF001-50023E	GASKET, R.CYLINDER HEAD SIDE COVER	1		
7	EF001-50016C	GASKET, L.CYLINDER HEAD SIDE COVER	1		
8	EG001-50017A	NUT, CAP 6	4		
9	EG001-50031	WASHER A,SEALING	4		
10	EG001-50022	WASHER,SEALING,6.5	1		
11	EF001-50019	O-RING 30.8×3.2	2		
12	EG001-50021	BOLT,FLANGE 6×110	1		
13	EG001-50020	BOLT,FLANGE 6×20	2		
14	ED001-03100-0051	PLUG, SPARK	1		

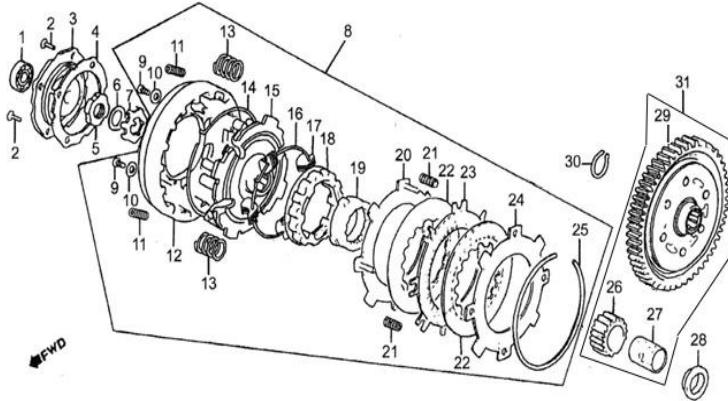
E-2	CYLINDER HEAD				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	EG001-50101	HEAD COMP., CYLINDER	1		
2		GUIDE, INTAKE VALVE	1		
3		GUIDE, EXHAUST VALVE	1		
4	EH003-504001	GASKET, CYLINDER HEAD	1		
5	VGA001-056001	PIPE, INTAKE	1		
6	ZFA001-050051	GASKET,INSULATOR	1		
7	NEI001-50037	BOLT,STUD	2		
8	EG001-50026	BOLT,FLANGE,6×23	1		
9	EF001-50021	COLLAR	1		
10	ZFA001-05004	O-RING	1		
11	ZFA001-05006	GASKET, INTAKE PIPE	1		
12		O-RING 9×1.6	2		
13	EF001-50022	SEAL,SQUARE	1		
14	VGA001-05005	BOLT FLANGE 6×25	2		
15	W5324011	BOLT 6×30	2		

E-3	CAMSHAFT / VALVE				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	EF001-50012	SEAL, VALVE STEM	2		
2	EG001-50200-0050	CAMSHAFT	1		
3	EG001-50500	PLATE COMP. STOPPER	1		
4	EG001-50300-0050	VALVE ROCKER ARM	2		
5	EF001-50013	SHAFT, VALVE ROCKER ARM	2		
6	EG001-50002-0050	VALVE, INTAKE	1		
7	EG001-50003-0050	VALVE, EXHAUST	1		
8	EF001-50005	SPRING, VALVE OUTER	2		
9	EF001-50004	SPRING, VALVE INNER	2		
10	EF001-50015	SEAT, VALVE SPRING INNER	2		
11	EG001-50018-0004	SEAT, VALVE SPRING OUTER	2		
12	EF001-50010	COTTER, VALVE	4		
13		SCREW, TAPPET ADJUSTING	2		
14		NUT, TAPPET ADJUSTING	2		
15	EG001-50301	ARM, VALVE ROCKER	2		
16	EG001-53014	PIN, STOPPER 8x12	1		
17	W5900011	BEARING 6902Z	1		
18	W5900012	BEARING 6905	1		
19	EG001-50201	CAMSHAFT	1		
20	EG001-50202	CAM, CLUTCH	1		
21	EG001-50203	WASHER	1		
22	EG001-50204	ROLLER	3		
23	EG001-50205	SPRING, ROLLER	3		

E-4	CYLINDER			ENZO110	
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	EH003-50001	CYLINDER	1		
2	EH003-50011B	GASKET,CYLINDER	1		
3	EG001-50026	BOLT FLANGE 6×23	1		
4	EG001-50028	WASHER	1		
5	EG001-50025	PIN,DOWER,8×14	4		
6	EF001-50029	SEAL,SQUARE	1		
7	EG001-50029	RUBBER RING	1		

E-5	CAM CHAIN / TENSIONER				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	EG001-51001-0052	SPROCKET, CAM	1		
2	EF001-51002-0050	CHAIN, CAM	1		
3	EG001-51009	ARM COMP.,CAM CHAIN TENSIONER	1		
4	EG001-51005-0050	ROLLER,CAM CHAIN TENSIONER	1		
5	EF001-51010	PIVOT,CAM CHAIN TENSIONER	1		
6	EG001-51008	SPRING,CAM CHAIN TENSIONER	1		
7	EG001-51100-0050	ROD COMP.,CAM CHAIN TENSIONER PUSH	1		
8	EF001-51012	HEAD,CAM CHAIN TENSIONER PUSH ROD	1		
9	EG001-51004-0050	ROLLER,CAM CHAIN GUIDE	1		
10	EG001-51011	PIN,CAM CHAIN GUIDE ROLLER	1		
11	EG001-51003	SPROCKET,CAM CHAIN GUIDE	1		
12	EF001-51014	SPINDLE,CAM CHAIN GUIDE	1		
13	EF001-510131	BOLT,SEALING	1		
14	EG001-51010	BOLT,5×12	2		
15	EF001-53024	WASHER,SEALING	1		
16	EF001-50028	WASHER	1		

E-6	RIGHT CRANKCASE COVER			ENZO110	
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	EH001-53501B-EL	COVER COMP., R. CRANKCASE	1		
2	EG001-53005B	GASKET,R.CRANKCASE	1		
3	EG001-53502	GAUGE, OIL LEVEL	1		
4	EF999-54500A-0051	LEVER,CLUTCH	1		
5	EF999-544001	PLATE ,CLUTCH CAM	1		
6	EF999-543001	ROD,CLUTCH PUSH	1		
7	EH050-53503A-EL50	COVER TRADE MARK	1		
8	EF999-54008A	BOLT,CLUTCH ADJUSTING	1		
9	EH050-53505	SCREW M6×14	6		
10	EF001-56408	THROUGH,OIL	1		
11	EF001-56409	SPRING,OIL THROUGH	1		
12	EG001-53008	CLIP,HIGH-TENSION CABLE	1		
13	EG001-54021	WASHER	1		
14	EF001-53008-0050	OIL SEAL	1		
15	EG001-54020	O-RING	1		
16	NEI001-53505	O-RING	1		
17	EG001-54022	NUT HEX	1		
18	EG001-53014	PIN DOWEL	2		
19	EF001-53019	BOLT FLANGE 6×40	5		
20	EG001-53009	BOLT,FLANGE 6×80	1		
21	EG001-53009	BOLT,FLANGE 6×80	1		
22	EF001-53012	BOLT,FLANGE 6×65	1		

E-7.1		CLUTCH			ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	W5900017	BEARING,RADIAL BALL	1		
2	EF999-56007	SCREW	4		
3	EF999-56005	COVER,CLUTCH OUTER	1		
4	EF999-56006	GASKET,CLUTCH OUTER COVER	1		
5	EF001-56405	NUT LOCK	1		
6	EF001-56407	WASHER LOCK	1		
7	EF001-56406	WASHER LOCK	1		
8	EH064-56300C-0050	CLUTCH	1		
9		SCREW, PAN	4		
10		WASHER	4		
11		SPRING,CLUTCH DAMPER	4		
12		OUTER,CLUTCH	1		
13		SPRING,CLUTCH	4		
14		RING,CLUTCH WEIGHT STOPPER	1		
15		PLATE,DRIVE	1		
16		RING,CLUTCH WEIGHT CENTER	1		
17		WEIGHT,CLUTCH	28		
18		CENTER,CLUTCH	1		
19		OUTER,DRIVER GEAR	1		
20		PLATE A,CLUTCH	1		
21		SPRING,CLUTCH FREE	4		
22		DISK A,CLUTCH FRICTION	2		
23		DISK B,CLUTCH FRICTION	1		

E-7.2

CLUTCH

ENZO110

The diagram shows an exploded view of a clutch assembly. The main components are arranged along a central axis. On the left, there is a small circular component (1) and a larger assembly (2, 3, 4, 5, 6). Moving right, there are various gears (12, 14, 16, 18, 20, 22, 24, 26, 29) and shafts (13, 15, 17, 19, 21, 23, 25). A large gear (29) is shown on the right, with a circlip (30) and a collar (28) nearby. An arrow labeled 'FWD' points to the left, indicating the forward direction of rotation.

24

PLATE B,CLUTCH

1

25

SET RING

1

26

EF999-56001-0050

GEAR,DRIVE

1

27

EF001-56402

GUIDE,CLUTCH CENTER

1

28

EF001-56401

COLLAR

1

29

EF999-56500-0061

GEAR,PRIMARY DRIVE

1

30

EF001-55001

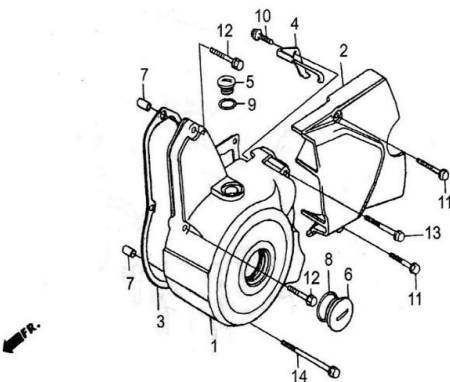
CIRCLIP,EXTERNAL

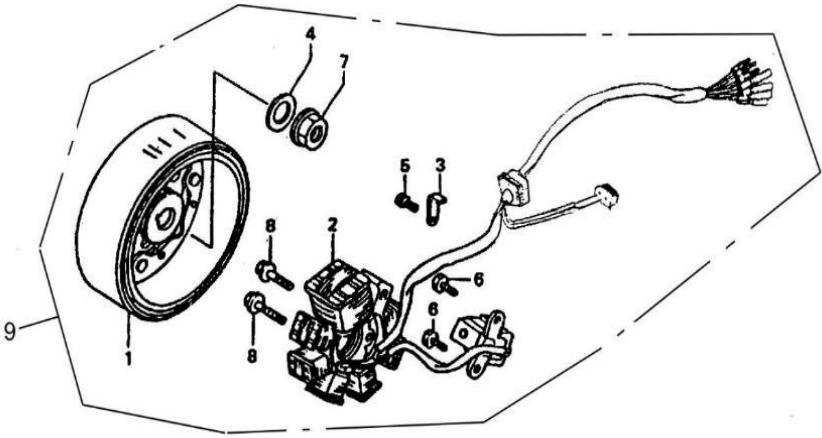
1

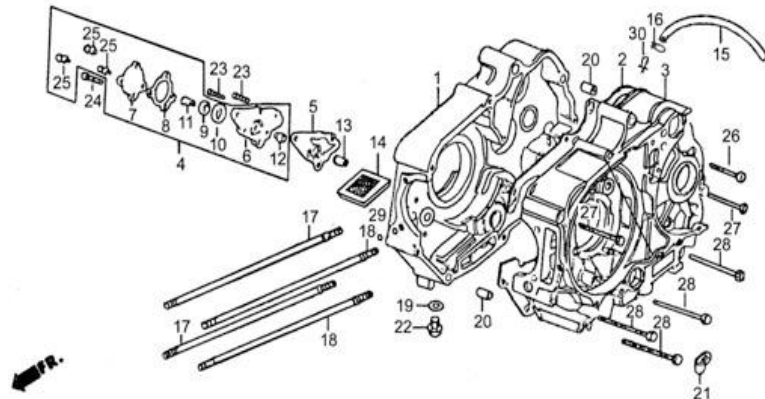
31

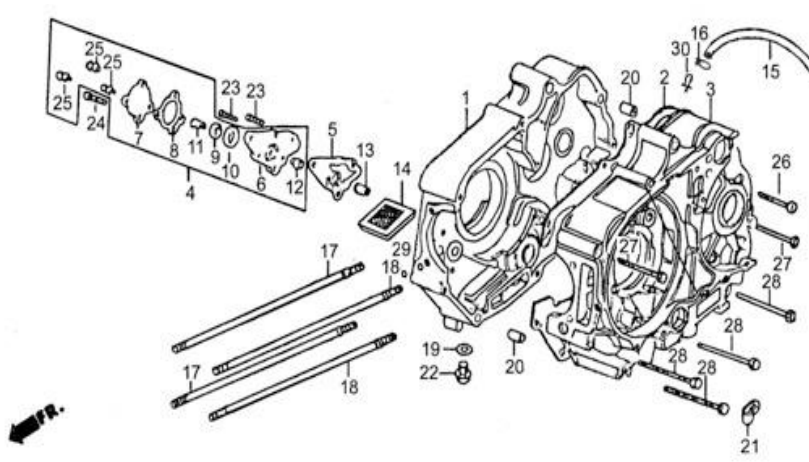
EF999-56800-0052

1

E-8	LEFT CRANKCASE COVER				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	EH001-534011-EL	COVER,L.CRANKCASE	1		
2	VHC997-05001-EL	COVER,L.CRANKCASE REAR	1		
3	EG001-53006	GASKET,L.CRANKCASE COVER	1		
4	EH001-53405	CLAMPER,A.C.GENERATOR	1		
5	EI997-53406-EL	CAP,A.C.GENERATOR	1		
6	EG001-53403-EL	PLUG,MAGNETO SCREW	1		
7	EG001-53014	PIN,DOWEL 8x12	2		
8	EG001-53406	O-RING,27x2.0	1		
9	EG001-53405	O-RING	1		
10	EG001-53407	BOLT,FLANGE 6x16	1		
11	ZFA001-05007	BOLT 6x28	2		
12	EG001-53012	BOLT,FLANGE 6x32	2		
13	EF001-53015	BOLT,FLANGE 6x50	1		
14	EG001-53010	BOLT,FLANGE 6x70	1		

E-9	GENERATOR				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1		FLYWHEEL COMP.	1		
2		STATOR COMP.	1		
3	EH001-53406	PLATE,PRESSURE	1		
4	EG001-52007A	WASHER	1		
5	W5322002	BOLT,5×10	1		
6	W5324001	BOLT,5×16	2		
7	EG001-52006A	NUT,FLANGE	1		
8	EI004-53015	BOLT,FLANGE,6×30	2		
9	EH092-84000A	GENERATOR	1		

E-10.1	CRANKCASE / OIL PUMP				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	EH003-53301	CRANKCASE COMP.	1		
2	EF001-53004B	GASKET,CRANKCASE	1		
3	EH003-53201	CRANKCASE COMP.,LEFT	1		
4	EH003-61	PUMP ASSY.,OIL	1		
5	EF001-61001	GASKET,PUMP BODY	1		
6		BODY,OIL PUMP	1		
7		COVER,OIL PUMP	1		
8		GASKET,OIL PUMP COVER	1		
9		ROTOR,OIL PUMP INNER	1		
10		ROTOR,OIL PUMP OUTER	1		
11		SHAFT,OIL PUMP	1		
12		PIN,OIL PUMP KNOCK	1		
13	EF001-61002	PIVOT, OIL PUMP	1		
14	EF001-53003	SCREEN,OIL PUMP	1		
15	EH001-53011A	TUBE,BREATHER	1		
16	EG001-53015	RING,LOCK C9	1		
17	EG001-53001-0050	BOLT A,CYLINDER STUD	2		
18	EG001-53002-0050	BOLT B,CYLINDER STUD	2		
19	EG001-53304A	PACKING,DRAIN COCK	1		
20	EI008-50033	PIN,KNOCK 10×14	2		
21	EG001-53011	CLIP, OVERFLOW PIPE	1		
22	EI997-53208-0050	BOLT,DRAIN PLUG,12×1.5	1		
23	W5313121	SCREW 6×16	2		

E-10.2	CRANKCASE / OIL PUMP				ENZO110
					
24	W5313510	SCREW 6×25	1		
25		SCREW 5×10	3		
26	EF001-53015	BOLT,FLANGE 6×50	1		
27	EF001-53014	BOLT,FLANGE 6×60	2		
28	EF001-53012	BOLT,FLANGE 6×65	4		
29	EG001-53303		1		
30	EF001-53204		1		

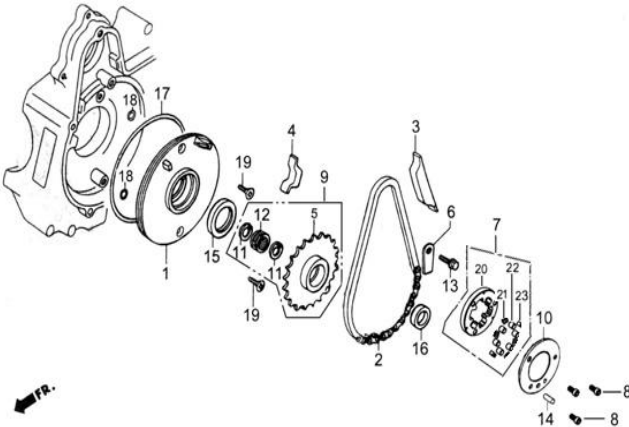
E-11

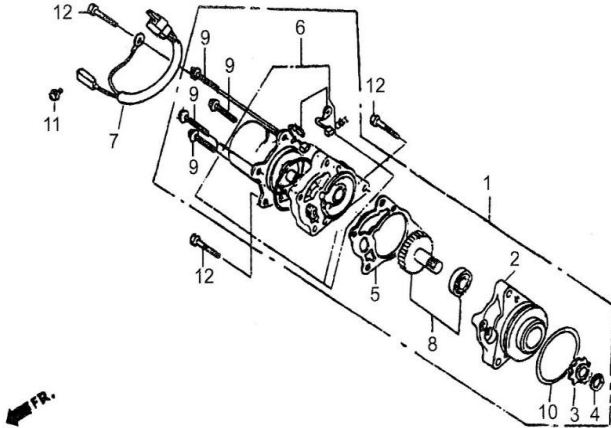
CRANKSHAFT / PISTON

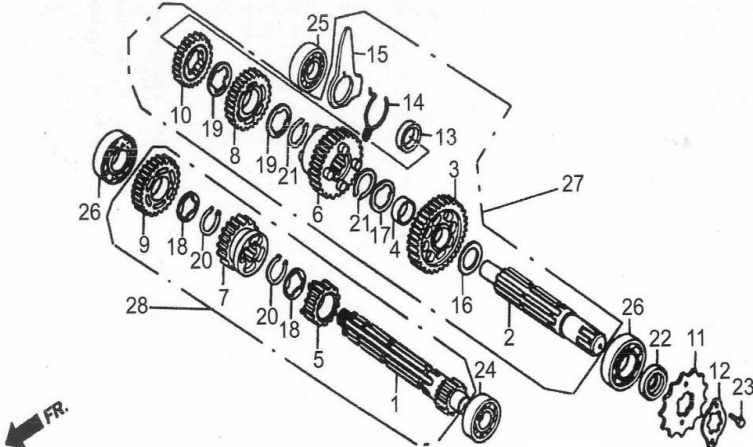
ENZO110

Exploded view diagram of a crankshaft and piston assembly. The diagram shows the crankshaft (1) with connecting rods (6) and pistons (3) attached. Various components are numbered: 1 (connecting rod), 2 (ring set), 3 (piston), 4 (pin), 5 (clip), 6 (rod), 7 (crankshaft comp., R), 8 (crankshaft comp., L), 9 (pin), 10 (sprocket), 11 (key), 12 (bearing), 13 (bearing). A 'FR' arrow points to the left.

No	Part No	Part description	Q'ty	Notes	Frame No
1	EF999-52100-0050	CONNECTING,COMP.	1		
2	EI998-52200-0059	RING SET,PISTON	1		
3	EH999-52001	PISTON(STD.)	1		
4	EH999-52002	PIN,PISTON	1		
5	EG001-52003	CLIP,PISTON PIN	2		
6	EG001-52101	ROD,CONNECTING	1		
7	EF999-52103	CRANKSHAFT COMP.,R	1		
8	EF999-52102	CRANKSHAFT COMP.,L	1		
9	EG001-52104	PIN,CRANK	1		
10	EF001-52106	SPROCKET,TIMING	1		
11	EF001-52004	KEY,WOODRUFF	1		
12	W5900003	BEARING,RADIAL BALL 304	2		
13	EG001-52105	BEARING,ROOLER NEEDLE	1		

E-12	STARTING CLUTCH				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	EG001-60002	PLATE,OIL SEPARATOR	1		
2	EG001-60001A	CHAIN,STARTING 62 LINK	1		
3	EG001-60004A	GUIDE,STARTINHG CHAIN	1		
4	EG001-60005	PROTECTOR ,STARTING CHAIN	1		
5	EG001-60003	SPROCKET COMP.,STARTING	1		
6	EG001-60006	PLATE,STARTING SPROCKET SETTING	1		
7	EG001-60100	OUTTER COMP.,STARTING CLUTCH	1		
8	W5313204	SCREW,6×16	3		
9	EG001-60300	SPROCKET COMP.,STARTING	1		
10	EG001-60102	PLATE,STARTING CLUTCH SIDE	1		
11	EG001-60010	CIRCLIP,INTERNAN,23	2		
12	W5040004	REARING,ROLLER,19×23×13	1		
13	EG001-60106	BOLT,6×10	1		
14	EG001-60107	ROLLER,5×11.8	1		
15	EG001-60008-0050	OIL SEAL,30×42×4.5	1		
16	EG001-60007-0050	OIL SEAL,18.9×28×5	1		
17	EG001-60009	O-RING	1		
18	EG001-53204	O-RING	2		
19	W5313204	SCREW,6×16	2		
20			1		
21	EG001-60104	SPRING,STARTING CLUTCH ROLLER	3		
22	EG001-60103	ROLLER	3		
23	EG001-60105	CAP,SPRING	3		

E-13	STARTING MOTOR				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	EG001-83-0099	MOTOR ASSY.,STARTER	1		
2		CASE,FRONT	1		
3		SPROCKET	1		
4		CIRCLIP,EXTERNAL,12	3		
5		PACKING	1		
6		MOTOR COMP.	1		
7		SUB HARNESS A	1		
8		GEAR COMP.,DRIVEN	1		
9		BOLT	4		
10		O-RING A	1		
11		SCREW-WASHER,4×6	1		
12	W5323003	BOLT,HEX,6×50	3		

E-14.1	TRANSMISSION				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	EF020-551011	MAINSHAFT,TRANSMISSION	1		
2	EG001-55207	COUNTERSHAFT	1		
3	EF020-552011	GEAR,COUNTERSHAFT FIRST(36T)	1		
4	EG001-55215	BUSH 20×9	1		
5	EF020-551021	GEAR,MAINSHAFT 2nd(16T)	1		
6	EF020-552021	GEAR,COUNTERSHAFT 2nd(31T)	1		
7	EG001-55103	GEAR,MAINSHAFT 3rd(21T)	1		
8	EG001-55203	GEAR,COUNTERSHAFT 3rd(26T)	1		
9	EG001-55104	GEAR,MAINSHAFT 4th(24T)	1		
10	EG001-55204	GEAR,COUNTERSHAFT 4th(23T)	1		
11	VGA001-05002-0054	SPROCKER,DRIVE	1		
12	ZFA001-05003C	PLATE,FIXING	1		
13	EG001-55210	COLLAR	1		
14	EG001-55209	SPRING,DAMPER	1		
15	EG001-55208	PLATE,GEARSHIFT DRUM LOCK	1		
16	EG001-55211	WASHER,THRUST 17	1		
17	EG001-55213	WASHER,SPLINE	1		
18	EG001-55108	WASHER,SPLINE 17	2		
19	EG001-55214	WASHER,SPLINE 20	2		
20	EG001-55107	CIRCLIP 17	2		
21	EG001-55212	CIRCLIP	2		
22	EF001-53010-0050	OIL SEAL 17×29×5	1		
23	W5324003	BOLT 6×8	2		

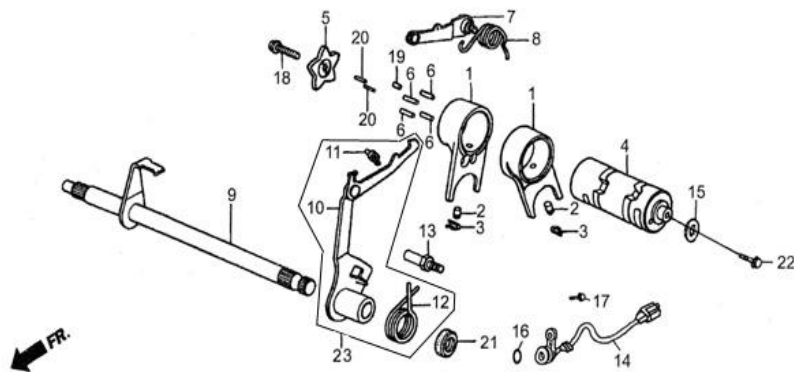
E-14.2

TRANSMISSION

ENZO110

FR.

24	W5010246	BEARING,RADIAL BALL 6001	1		
25	W5010254	BEARING,RADIAL BALL 6201	1		
26	W5900014	BEARING,RADIAL BALL 6203	2		
27	EF020-552001	COUNTER SHAFT COMP., TRANSMISSION	1		
28	EF020-551001	MAIN SHAFT COMP., TRANSMISSION	1		

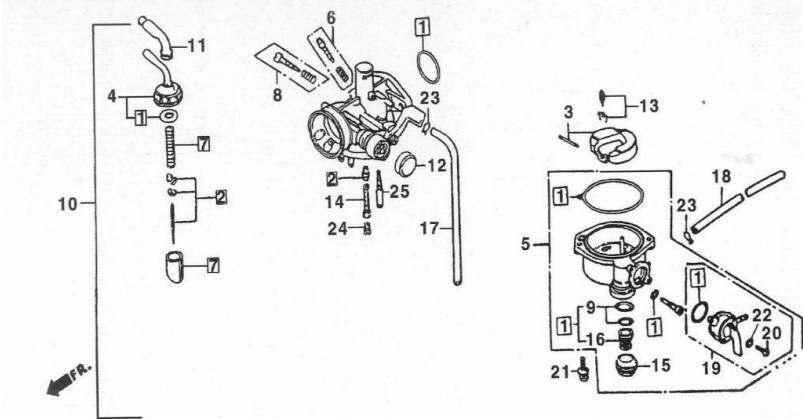
E-15	GEARSHIFT DRUM				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	EG001-54003	FORK,GEARSHIFT	2		
2	EG001-54014	PIN,GEARSHIFT FORK GUIDE	2		
3	EG001-54013	CLIP,GEARSHIFT FORK GUIDE PIN	2		
4	EG003-54001	DRUM,GEARSHIFT	1		
5	EG001-54007	PLATE,GEARSHIFT DRUM STOPPER	1		
6	EG001-54017	PIN,GEARSHIFT DRUM	4		
7	EG001-54200	STOPPER,COMP.,GEARSHIFT	1		
8	EG001-540021	SPRING,GEARSHIFT DRUM STOPPER	1		
9	EF009-54120-0051	SPINDLE,COMP.,GEARSHIFT	1		
10		ARM COMP.,GEARSHIFT	1		
11	EG001-54024	SPRING,GEARSHIFT ARM	1		
12	EG001-54023	SPRING,GEARSHIFT RETURN	1		
13	EF001-54009	PIN,SHIFT RETURN SPRING	1		
14	VFA001-890002	SWITCH COMP.,GEARSHIFTING DISPLAY	1		
15	EG003-89100	WASHER COMP.	1		
16	VGB001-89001	O-RING	1		
17	W5326005	BOLT FLANGE 6×16	1		
18	EG001-54011	BOLT 6×16	1		
19	EG001-54012	ROLLER 4×10	1		
20	EG001-54018	ROLLER 3×8.5	2		
21	EF001-53009-0050	OIL SEAL 11.6×24×11	1		
22	W5312102	SCREW 6×16	1		
23	EG001-54150-0052	ARM COMP.,GEARSHIFT	1		

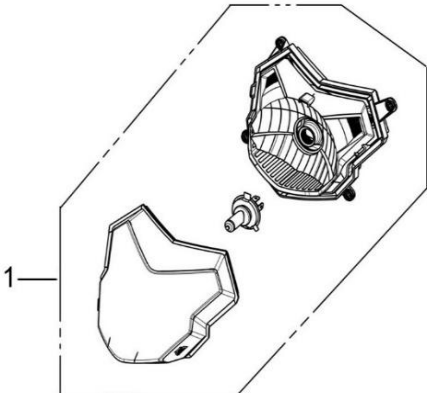
E-16

KICK STARTER

ENZO110

No	Part No	Part description	Q'ty	Notes	Frame No
1	EF001-57001	PINION,KICK STARTER	1		
2	EG001-57004	RATCHET,STARTING DRIVING	1		
3	EG001-57010	SPINDLE,KICK STARTING	1		
4	EG001-57008	RETAINER,KICK SPRING	1		
5	EG001-57005	SPRING,STARTING PINION FRICTION	1		
6	EG001-57007	SPRING,KICK STARTING	1		
7	EG001-57006	WASHER 17	1		
8	EG001-57002	WASHER,THRUST 20	1		
9	EG001-57003	WASHER 20	2		
10	EG001-57009	CIRCLIP EXTERNAL	1		
11	EF020-570001	KICK STARTER	1		

E-17	CARBURETOR				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1		GASKET SET	1		
2		NEEDLE SET,JET	1		
3		FLOAT SET	1		
4		TOP SET	1		
5		CHAMBER SET,FLOAT	1		
6		SCREW SET A	1		
7		VALVE SET,THROTTLE	1		
8		SCREW SET B	1		
9		GASKET SET B	1		
10	VGA001-052004-0051	CARBURETOR ASSY.	1		
11		CAP,CABLE SEALING	1		
12		CAP,CHOKE DUST	1		
13		VALVE COMP.,FLOAT	1		
14		HOLDER,NEEDLE JET	1		
15			1		
16		SCREEN,FILTER	1		
17		TUBE,AIR VENT	1		
18		TUBE,OVER FLOW	1		
19		BODY SET,LOCK	1		
20		SCREW,PAN,3×12	2		
21		SCREW-WASHER,4×18	2		
22		WASHER, SPRING, 3	2		
23		CLIP TUBE B6.5	1		
24		JET.MAIN,#75	1		
25		JET.SLOW,32#	1		

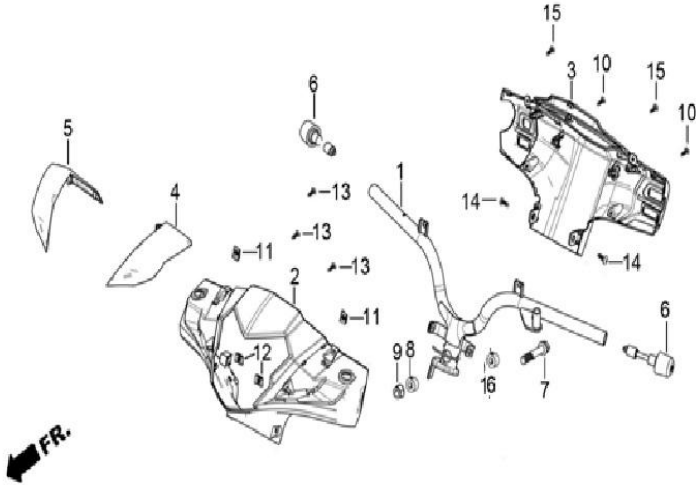
F-1	HEADLIGHT				ENZO110
 					
No	Part No	Part description	Q'ty	Notes	Frame No
1	VI0149-72000A	HEADLIGHT	1		

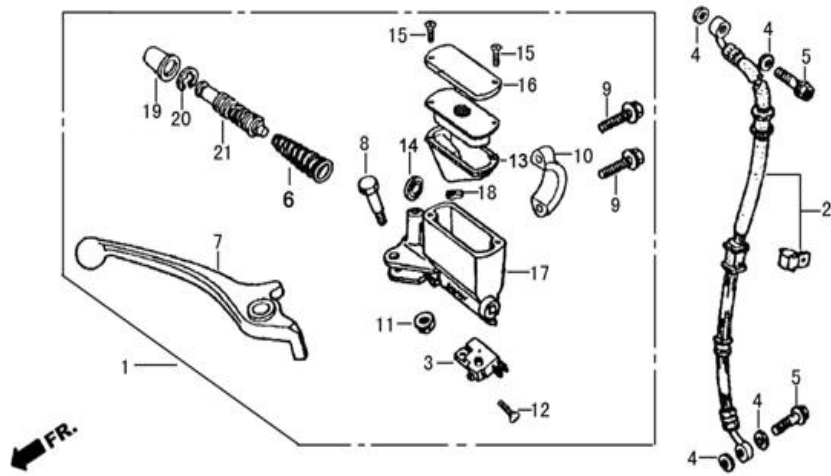
F-3

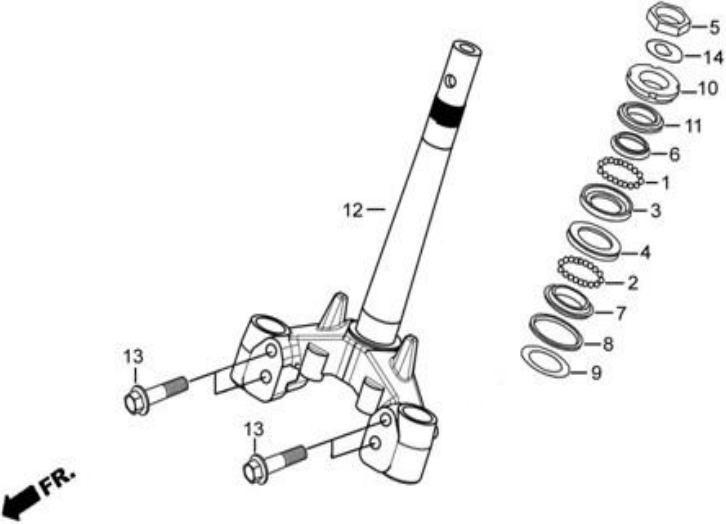
SWITCH / CABLE

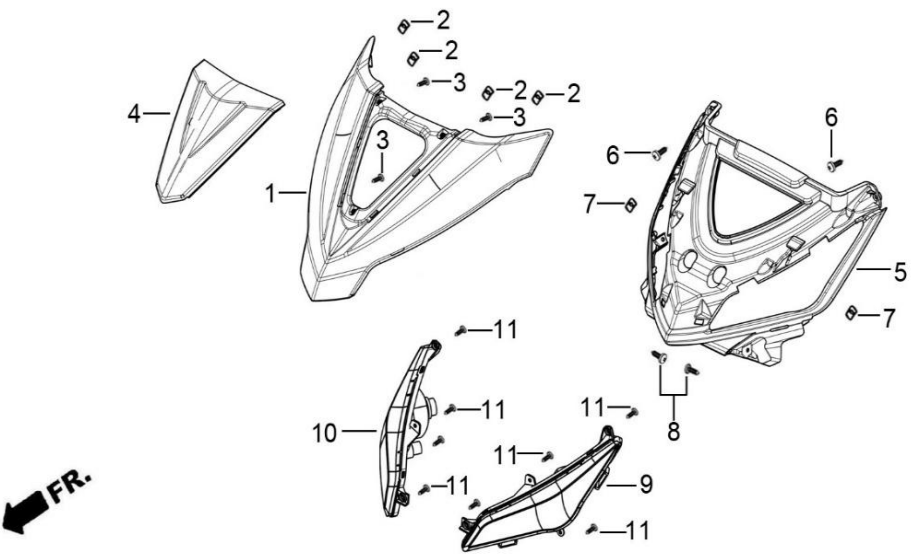
ENZO110

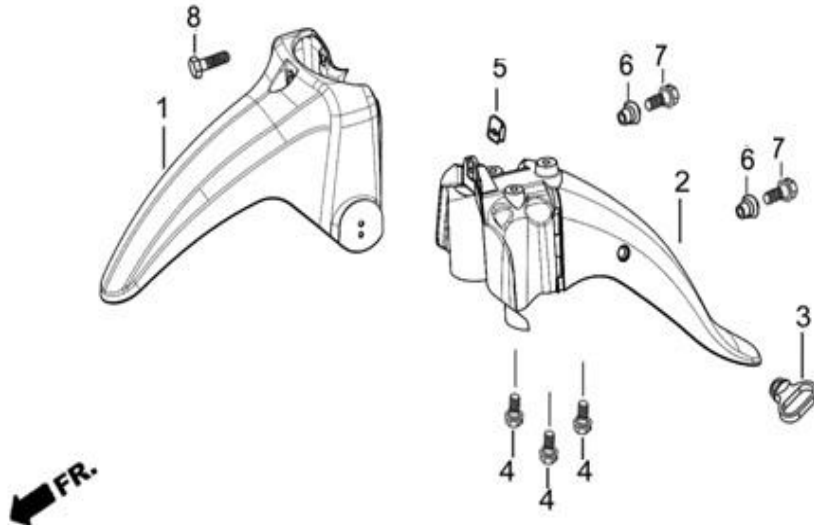
No	Part No	Part description	Q'ty	Notes	Frame No
1	VGA001-12400B-0060	CABLE,THROTTLE	1		
2	VG0224-12400	CABLE, CHOKE	1		
3	VHC997-01072	MIRROR	1		
4	VHC997-01073	BAND	1		
5	W5313132	SWITCH, LIGHTING	2		
6	W5365101	BUTTON, STARTING	1		
7	VGA001-11007	SWITCH, DIMMER	1		
8	VHC046-74003A	BUTTON, HORN	1		
9	VHC046-74002-0090	SWITCH, TURNING SIGNAL	1		
10	VHC046-74001-0090	RUBBER COMP,R.HANDLE	1		
11	VHC046-74004-0090	RUBBER,L.HANDLE	1		
12	VHC046-74005A		1		
13	VI0149-10000A		1		
14	VGB001-11201-0050		1		
15	VGB001-11250-0050		1		
16	VHC997-11400		1		

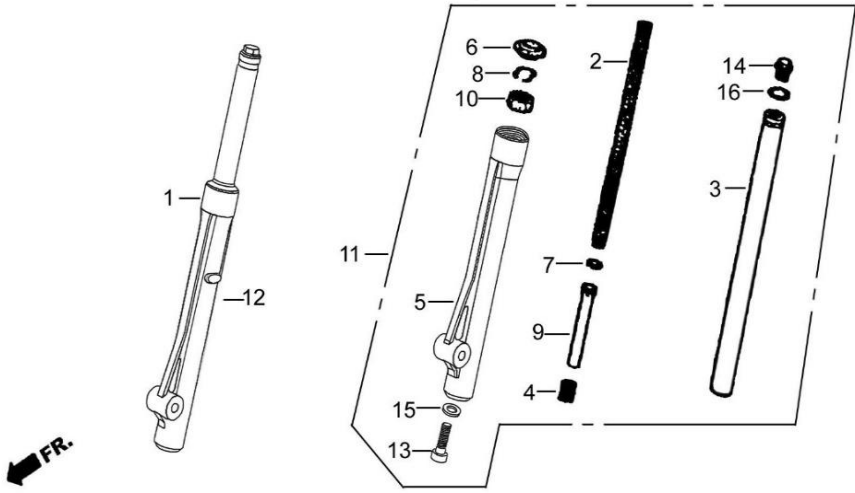
F-4	HANDLE PIPE / HANDLE COVER				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	VI0136-11100A-0229	HANDLE PIPE COMP.	1		
2	VI0149-17720-**	COVER,HANDLE FR.	1	PAINTED PART	
3	VI0136-17730A	COVER,HANDLE RR.	1		
4	VI0149-17740A	LEFT HANDLE DECORATIVE COVER	1	SILVER	
5	VI0149-17750A	RIGHT HANDLE DECORATIVE COVER	1	SILVER	
6	VI0149-11300	END PLUG,HANDLEBAR	2		
7	VGA001-01115A	BOLT,FLANGE,10×50	1		
8	VGA001-01005	SLEEVE,SETTING	1		
9	VGA001-01114	NUT,LOCKING M10×1.25	1		
10	NW5311318	SCREW, TAPPING ST4.8×16	2		
11	TG0003-17905A	NUT,CLAMP	2		
12	TG0003-17905A	NUT,CLAMP	2		
13	NW5311311	SCREW, TAPPING ST4.2×12	4		
14	W5373027		2		
15	NW5311314		4		
16	TN0001-01006		1		

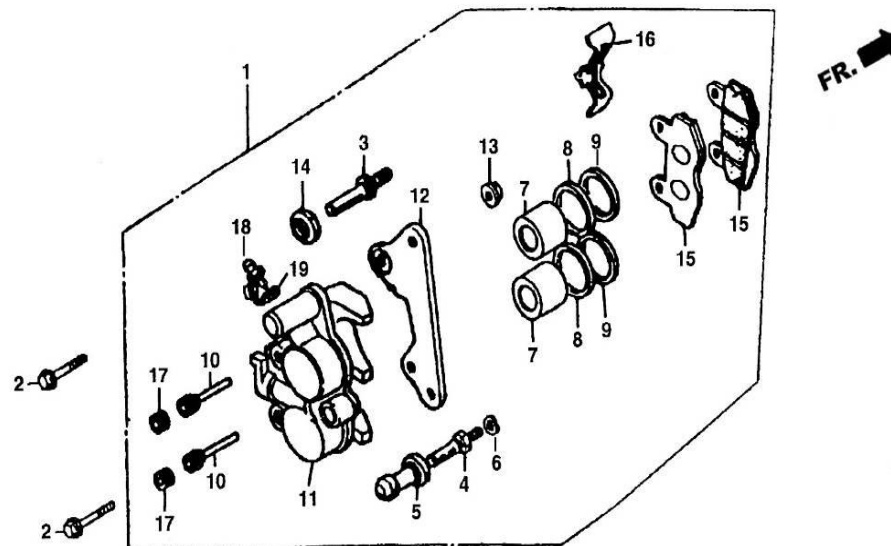
F-5	BRAKING PUMP COMP.				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	VHK027-19100B	PUMP COMP.,BRAKING	1		
2		PIPE COMP.,BRAKING	1		
3		SWITCH, BRAKING LIGHT	1		
4	ZJ0049-19008	RING, SEALING	4		
5	ZJ0049-19007	BOLT, OIL THRU, 10×1.25	2		
6		SPRING,RETURN	1		
7		LEVER,BRAKING HANDLE	1		
8		BOLT,PIVOT	1		
9		BOLT,HALF COVER	2		
10		COVER,HALF	1		
11		NUT,SELF LOCK	1		
12		SCREW	1		
13		PAD, OIL CUP	1		
14		OIL WINDOW	1		
15		SCREW, OIL CUP COVER M4×12	2		
16		CAP,OIL CUP	1		
17		BODY,PUMP	1		
18		O-RING	1		
19		COVER,DUST	1		
20		CIRCLIP	1		
21		PISTON,PUMP	1		
22	VI0149-19500D	BRAKE, FR. DISK TYPE	1		

F-6	STEERING STEM				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	VGA001-14400-0050	RETAINER A	1		
2	VGA001-14300-0050	RETAINER COMP.	1		
3	VGA001-14202-0051	SEAT,BALL UPPER	1		
4	VGA001-14203-0051	SEAT,BALL BOTTOM	1		
5	VGA001-14001	NUT,STEERING STEM LOCK	1		
6	VGA001-14201-0050	RACE,STEERING TOP CONE	1		
7	VGA001-14007	RACE,STEERING BOTTOM CONE	1		
8	VGA001-14008	DUST SEAL,STEERING STEM	1		
9	VGA001-14009	WASHER,DUST SEAL	1		
10	VGA001-14002	NUT,STEERING STEM TURN	1		
11	VGA001-14003	WASHER, STEERING STEM DUST	1		
12	VI0136-14100	STEM SUB ASSY., STEERING	1		
13	W5326088	BOLT,FLANGE,10×45	4		
14	VHC997-14150	WASHER, LOOSE PROOF	1		

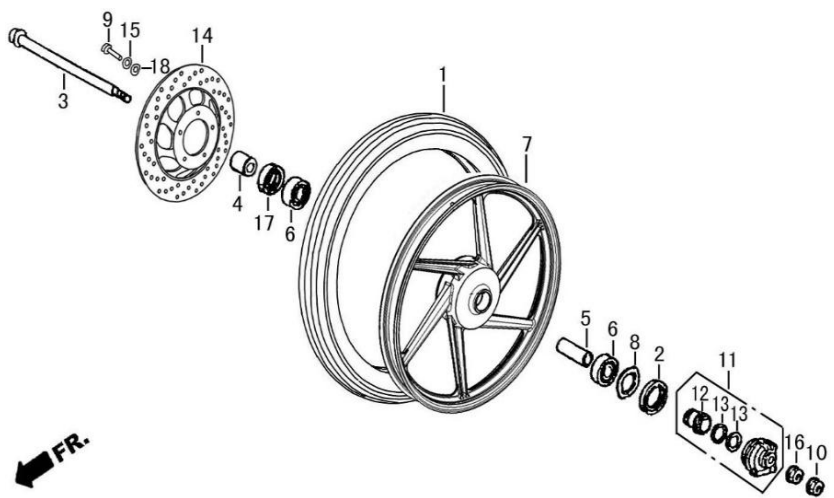
F-7	FRONT PANEL				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	VI0149-17941-**	FRONT COVER	1	PAINTED PART	
2	TG0003-17905A	SPRING CLIP	4		
3	NW5311311	SELF-TAPPING SCREW ST4.2*12(φ11)	3		
4	VI0136-17942	FRONT COVER DECORATIVE CAP	1	SILVER	
5	VI0149-17943	FRONT COVER LINER	1		
6	NW5311311	SELF-TAPPING SCREW ST4.2*12(φ11)	2		
7	TG0003-17905A	SPRING CLIP	2		
8	NW5311314	SELF-TAPPING SCREW ST4.2*16(φ11)	2		
9	VI0149-71150-0050	LEFT FRONT TURN SIGNAL	1	LED	
10	VI0149-71170-0050	RIGHT FRONT TURN SIGNAL	1	LED	
11	NW5311311	SELF-TAPPING SCREW ST4.2*12(φ11)	8		

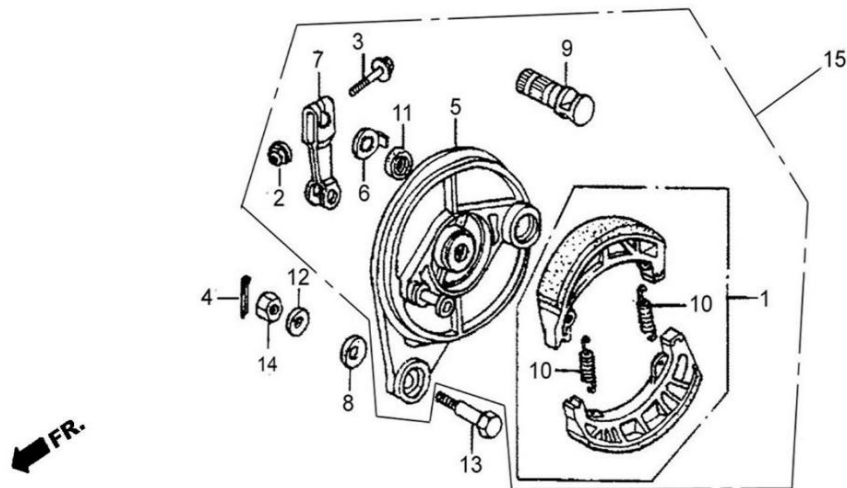
F-8	FRONT FENDER				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	VI0136-17201-**	FRONT, FR. MUDGUARD	1	PAINTED PART	
2	VHK027-17211	REAR, FR. MUDGUARD	1		
3	VGA001-01037A	CABLE RING	1		
4	VGA001-01116	BOLT,FLANGE,6×17	3		
5	TGA999-01105	CLAMP NUT	1		
6	VGB001-01099	SLEEVE,BOLT	2		
7	W5326007	BOLT,6×18	2		
8	VHK001-01001	BOLT, FLANGE	1		

F-9	FRONT CUSHION				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	VI0136-14400	FORK ASSY., R.FR.	1		
2		SPRING,FR.FORK	2		
3		PIPE COMP.,FR.FORK	2		
4		SPRING,DAMPING	2		
5		CASE,L.BOTTOM	1		
6		DUST SEAL	2		
7		RING PISTON	2		
8		RING,OIL SEAL STOPPER	2		
9		BAR,PISTON	2		
10		OIL SEAL,24.5×37×10.5	2		
11	VI0136-14300	FORK ASSY., L.FR.	1		
12		CASE,L.BOTTOM	1		
13		SCREW,8×28	2		
14		PLUG,THREAD	2		
15		SEALS WASHER	2		
16		O-RING	2		

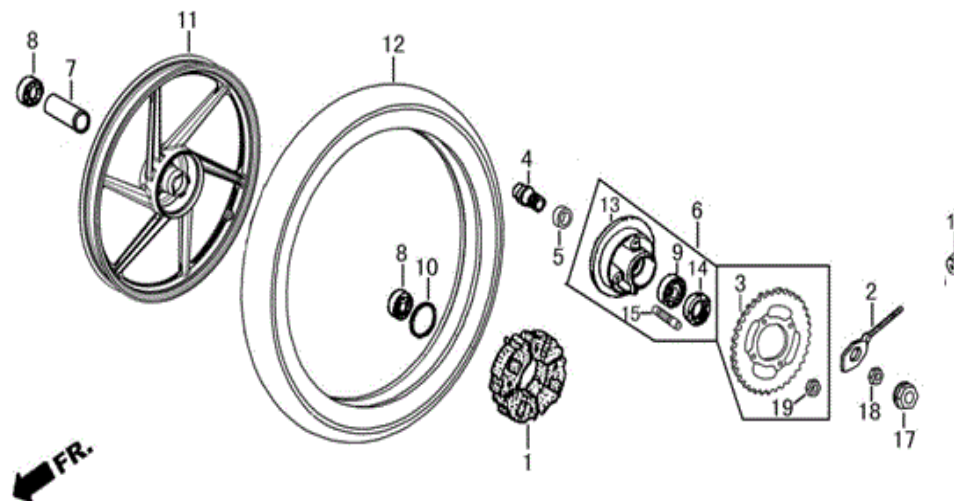


No	Part No	Part description	Q'ty	Notes	Frame No
1	VH0542-19510B	CALIPER, COMP. BRAKE	1		
2	W5326065	BOLT 8x28	2		
3		SHAFT, MAIN SLIDE	1		
4		SHAFT, SECOND SLIDE	1		
5		COVER, SECOND SLIDE SHAFT RUBBER	1		
6		WASHER, SPRING	1		
7		PISTON, CALIPER	2		
8		RING, PISTON	2		
9		GASKET, SQUARE	2		
10		ROD, GUIDE	2		
11		BODY, CALIPER	1		
12		STAND, MOUNTING	1		
13		NUT, SELF LOCK	1		
14		COVER, RUBBER	1		
15		DISC, BRAKING	2		
16		SPRING, BRAKING DISC	1		
17		PLUG, SCREW	2		
18		COCK, RELIEF	1		
19		COVER, RELIEF COCK DUST	2		

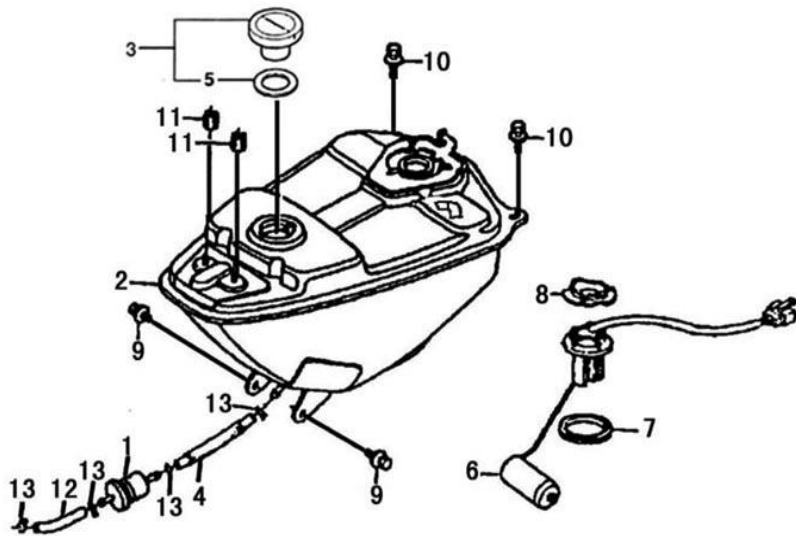
F-11	FRONT WHEEL				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	VHC997-18200D	TUBE,FR.WHEEL TYRE	1		
2	VGA001-18008	SEAL,A OIL	1		
3	VHC997-180031	AXLE,FR.WHEEL	1		
4	VH0365-18010	COLLAR,FR.WHEEL SIDE	1		
5	VH0365-18020	COLLAR,DISTANCE	1		
6	W5900001	BEARING	2		
7	VH0542-18101B-0251	RIM,FR.WHEEL	1		
8	VHC997-18007	PLATE DRIVING	1		
9	W5322003	BOLT, M6×22	5		
10		CAP,LOCKING NUT	1		
11	VHK027-18300-EL	SPEED METER SET	1		
12		GEAR Z1, DRIVING	1		
13		WASHER B ,DRIVING	2		
14	VH0542-19001-05	DISC,FR.BRAKING	1		
15	W5366114	WASHER 6, SPRING	5		
16	VGA001-18002	NUT,LOCKING 12×1.25	1		
17	VGA001-18008	SEAL,OIL	1		
18	W5366114	WASHER 6	5		

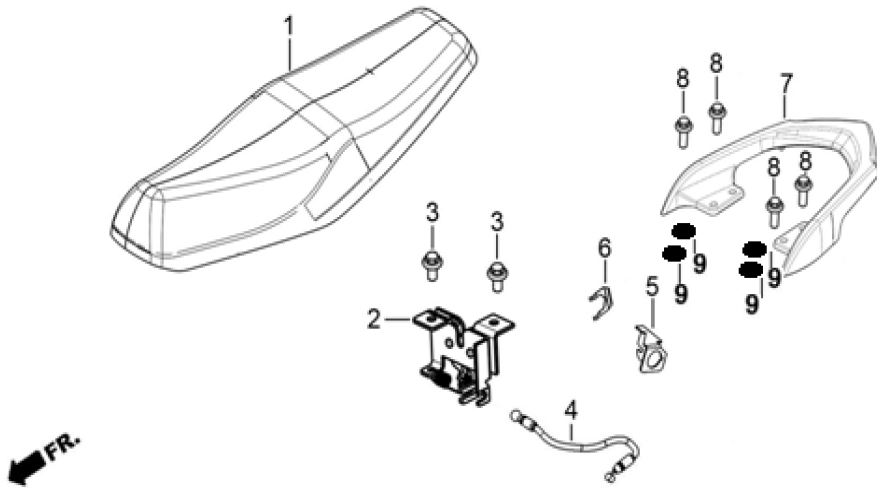


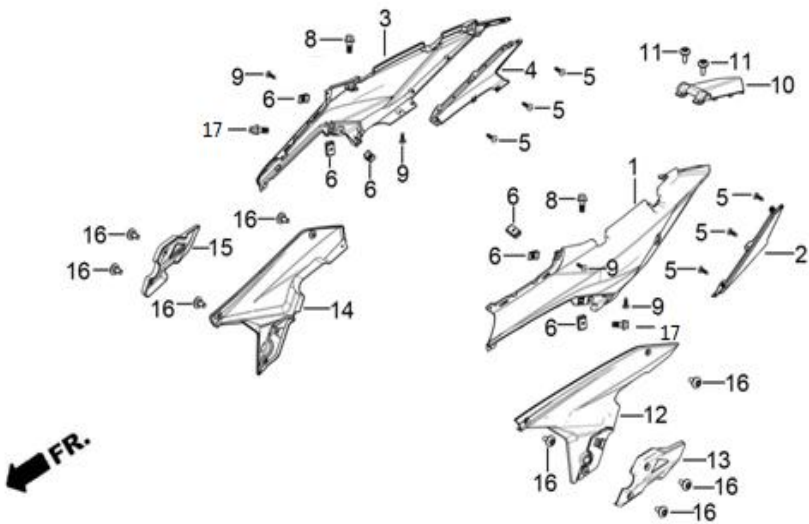
No	Part No	Part description	Q'ty	Notes	Frame No
1		SHOE SET,BRAKE	2		
2		NUT,FLANGE,6	1		
3		BOLT FLANGE 6×32	1		
4	W5338102	PIN,SPLIT 2.0×16	1		
5		PANEL COMP.,RR.BRAKE	1		
6		INDICATOR,RR.BRAKING	1		
7		ARM,RR.BRAKE	1		
8	VGA001-01042	PAD, RUBBER	1		
9		CAM, RR.BRAKE	1		
10		SPRING,BRAKE SHOE	2		
11		DUST SEAL	1		
12	VGA001-01071	WASHER 8	1		
13	ZDG001-28008	BOLT,BRAKE STOPPER	1		
14	W5336205	NUT 8	1		
15	VGA001-28400D-EL	REAR BRAKE	1		

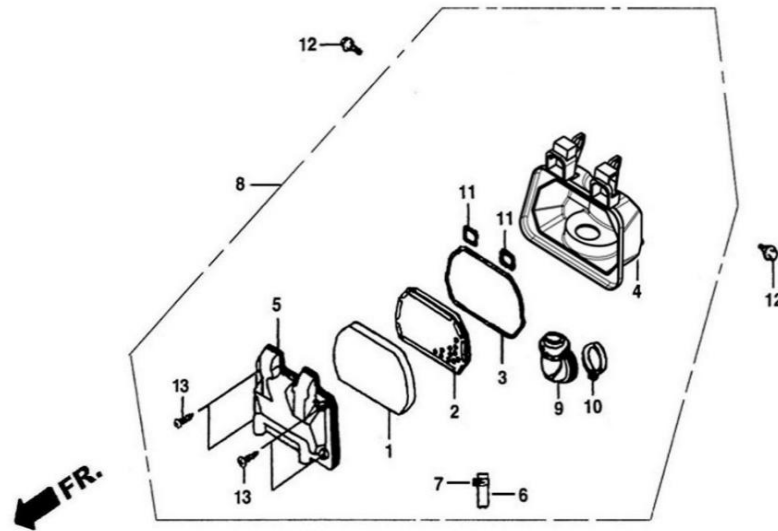


No	Part No	Part description	Q'ty	Notes	Frame No
1	VHC997-28007B	BLOCK,DAMPER	4		
2	VGB020-28600B	ADJUSTER,L.CHAIN	2		
3	VGA001-28351	SPROCKET,REAR	1		
4	VHC997-28013	COLLAR, DISTANCE	1		
5	VHB042-28001	COLLAR,RR.WHEEL SIDE	1		
6	VGA001-28300	DAMPER COMP.	1		
7	VHB042-28002	SLEEVE,RR.WHEEL AXLE	1		
8	W5010265	BEARING,6301	2		
9	W5016031	BEARING,6203-RS	1		
10	VGA001-28008	O-RING 40.5×3	1		
11	VH0542-28101A-0251	RIM, RR.WHEEL	1		
12	VHC997-28200E	TIRE,RR.WHEEL	1		
13	VGA001-28300-0050	DAMPER	1		
	VGA001-28302-0090	OIL SEAL, 27×40×6	1		
15	VGA001-28301	BOLT,STUD	4		
16		NUT, 6	1		
17	VGA001-18002	NUT, LOCKING 12×1.25	1		

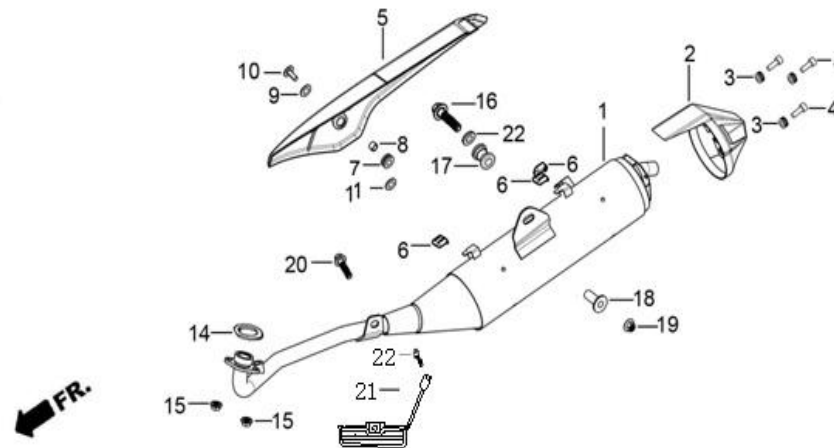
F-14	FUEL TANK				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	VGA001-01035-0052	FUEL FILTER	1		
2	VHC997-361001	FUEL TANK WELDING ASSEMBLY	1		
3	VGA001-36200B	FUEL TANK CAP ASSEMBLY	1		
4	VHC997-010901	FUEL PIPE I ASSEMBLY	1		
5		FUEL TANK CAP SEALING GASKET	1		
6	VGB001-86000B	FUEL LEVEL SENSOR	1		
7	VGA001-01034	SEALING RING	1		
8	VGA001-01063	FUEL LEVEL SENSOR BRACKET	1		
9	W5328205	BOLT ASSEMBLY GB9074.14-88 6*16	2		
10	W5326022	BOLT GB5787 8*16	2		
11	NW5331308	FLANGE NUT GB6177-86 M6	2		
12	VHK027-36021	FUEL PIPE (II) ASSEMBLY	1		
13	VGA001-01014	CLIP	4		

F-15	SEAT				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	VI0136-33000E	SEAT COMP., DOUBLE	1		
2	TG0003-02100A	SEAT LOCK COMP.	1		
3	W5326003	BOLT, FLANGE, 6×12	2		
4	VH0116-12600-0060	CABLE, SEAT LOCK	1		
5	VHC997-73401	HOLDER,SEAT LOCK CABLE	1		
6	VGA001-01016	SPRING, LOCK KEY SETTING	1		
7	VI0136-04450-16	RAIL, RR.GRIP	1		
8	W5326026	BOLT, HEX, 8×28	4		
9	VGB001-37003		4		

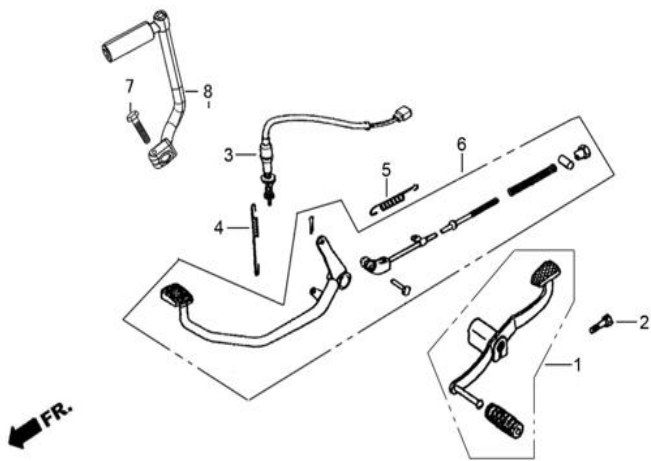
F-16	BODY COVER				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	VI0136-17821-**	LEFT BODY COVER	1	PAINTED PART	
2	VI0149-17822	LEFT BODY COVER DECORATIVE STRIP	1		
3	VI0136-17831-**	RIGHT BODY COVER	1	PAINTED PART	
4	VI0149-17832	RIGHT BODY COVER DECORATIVE STRIP	1		
5	NW5311311	SELF-TAPPING SCREW ST4.2*12	6		
6	VGA001-011061	CLAMP NUT M5 (OPENING SIZE 1.8)	6		
8	ZJ0038-02001	FAIRING FASTENING SCREW M5	2		
9	NW5311314	SELF-TAPPING SCREW ST4.*16	4		
10	VI0149-17851	REAR CENTER COVER	1	SILVER	
11	VGA001-011102-0060	STAINLESS STEEL HEX SOCKET SCREW 6*16	2		
12	VI0149-17871	LEFT SIDE COVER	1		
13	VI0149-17872-MN	LEFT SHIELD	1		
14	VI0149-17881	RIGHT SIDE COVER	1		
15	VI0149-17882-MN	RIGHT SHIELD	1		
16	ZJ0038-02001	FAIRING FASTENING SCREW M5	8		
17	W5326003	FLANGE BOLT WHITE ZINC GB5787 6*12	2		

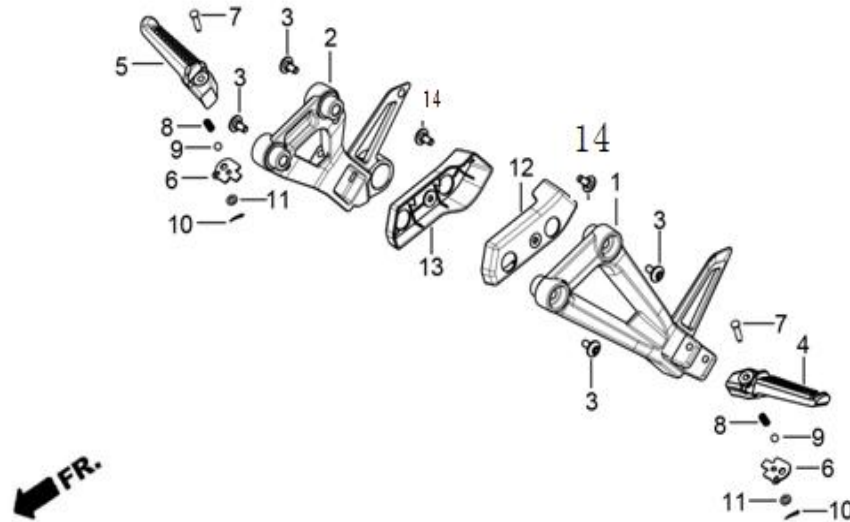


No	Part No	Part description	Q'ty	Notes	Frame No
1		ELEMENT,AIR CLEANER	1		
2		TRAP COMP.,FLAME	1		
3		SEAL,AIR CLEANER COVER	1		
4		CASE,AIR CLEANER	1		
5		COVER,AIR CLEANER CASE	1		
6		TUBE	1		
7		CLAMP	1		
8	VIB031-05100	AIR CLEANER	1		
9		TUBE,AIR CLEANER CONNECTING	1		
10		SEAL,AIR CLEANER CONNECTING TUBE	1		
11		SEAL,AIR CLEANER CASE	2		
12	VGA001-01111	BOLT,FLANGE 6×12	2		
13		SCREW,TAPPING ST5.5×16-F	4		



No	Part No	Part description	Q'ty	Notes	Frame No
1	VI0136-62	MUFFLER COMP.,EXHAUST	1		
2	VI0136-05001-EL	PROTECT COVER,EXHANST PIPE	1		
3	ZJ0038-05006	RUBBER,COVER PROTECT	3		
4	ZJ0038-05007		3		
5	VI0149-17062		1		
6	ZH0020-62201		3		
7	TG0004-62007		1		
8	TG0004-62006	RUBBER,COVER PROTECT	1		
9	W5365102		1		
10	GDA001-175100		1		
11	TG0003-62003		1		
14	VGA001-05301	GASKET,EXHAUST PIPE	1		
15	W5336205	NUT HEX 8	2		
16	VGA001-01115A		1		
17	ZJ0049-17009		1		
18	ZJ0049-01093		1		
19	W5336504		1		
20	W5326131		1		
21	VI0149-04050		1		
22	W5326109		1		

F-19	PEDAL				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	VGA001-055001	PEDAL,GEAR SHIFT	1		
2	W5324007		1		
3	VGA001-76200	SWITCH,REAR BRAKE	1		
4	VGB001-01012	SPRING,BRAKE SWITCH	1		
5	VGB001-01016	SPRING	1		
6	VGB019-25100C-0060	ROD COMP.,RR.BRAKE PULL	1		
7	W5324024		1		
8	ZH0004-60		1		

F-20	REAR STEP				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	VI0149-04100-16	LEFT SECONDARY FOOT PEG SUPPORT ASSEMBLY	1		
2	VI0149-04200-16	RIGHT SECONDARY FOOT PEG SUPPORT ASSEMBLY	1		
3	VI0149-01001	HEX SOCKET BOLT M8*32	4		
4	ZH0020-04102A-16	LEFT SECONDARY FOOT PEG BODY	1	SILVER	
5	ZH0020-04202A-16	RIGHT SECONDARY FOOT PEG BODY	1	SILVER	
6	ZH0020-04103	LIMIT PLATE	2		
7	ZJ0038-04001	PIN SHAFT	2		
8	VHK027-04104	SPRING	2		
9	VHK027-04105	STEEL BALL	2		
10	W5338101	SPLIT PIN GB91-76 1.6*16	2		
11	W5367202	WASHER GB848-86 φ6	2		
12	VI0149-17873	LEFT FOOT PEG SUPPORT SHIELD	1		
13	VI0149-17883	RIGHT FOOT PEG SUPPORT SHIELD	1		
14	W5326109	BOLT GB5789/M6*12 (TRIVALENT COLOR/S10)	2		

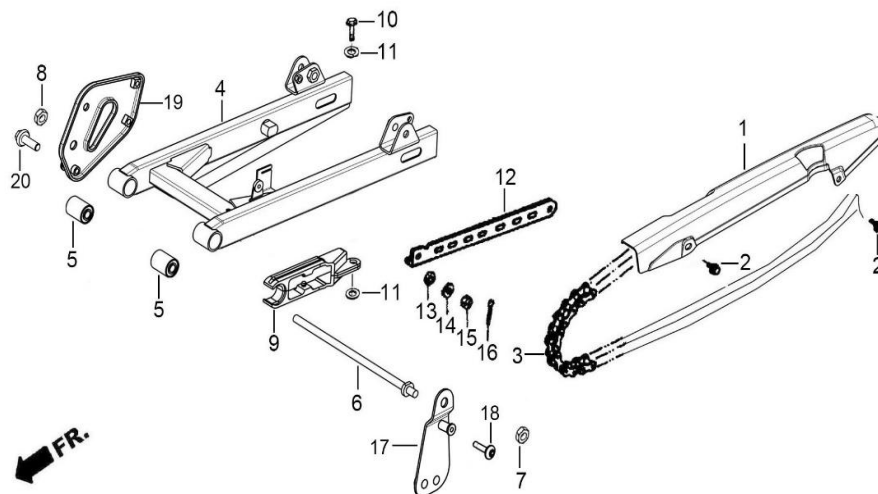
F-21

STAND

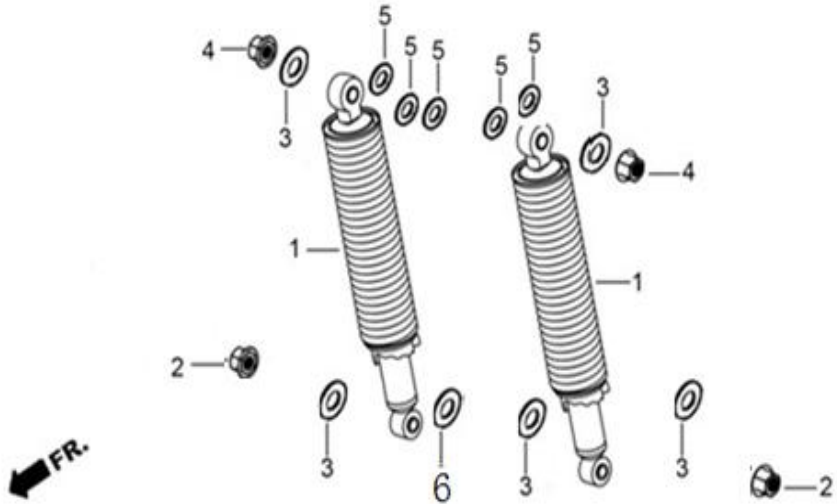
ENZO110

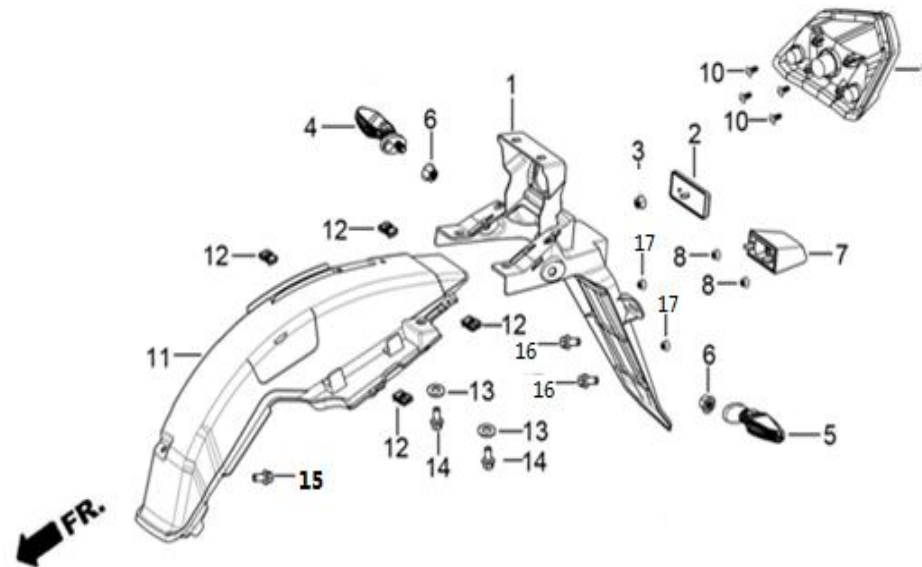
Exploded view diagram of the STAND assembly. The diagram shows various components labeled with numbers 1 through 14. A dashed line indicates the assembly path. A 'FR.' label with an arrow points towards the left side of the diagram.

No	Part No	Part description	Q'ty	Notes	Frame No
1	VHC997-24400F-0061	STAND,MAIN	1		
2	VGA001-01002A	PIVOT,MAIN STAND	1		
3	VBB999-010611	PLATE,MAIN STAND HOOK	1		
4	VHB997-01031	DAMPER,MAIN STAND	1		
5	VI0136-24-0060	STAND COMP.,SIDE	1		
6	ZI0038-02003	PIVOT BOLT,SIDE STAND	1		
7	VI0106-01101	NUT,10×1.25	1		
8	W5338109	COTTER,3.0×26	1		
9	VGA001-01011	SPRING,MAIN STAND	1		
10	VGB001-010151	SPRING,SIDE STAND	1		
11	VI0136-24-0060	STEP ASSY.,FOOT	1		
12	VGA001-24101	RUBBER,STEP	2		
13	W5328308	BOLT,8×25	4		
14	VI0136-24-0060	STEP & SIDE STAND	1		



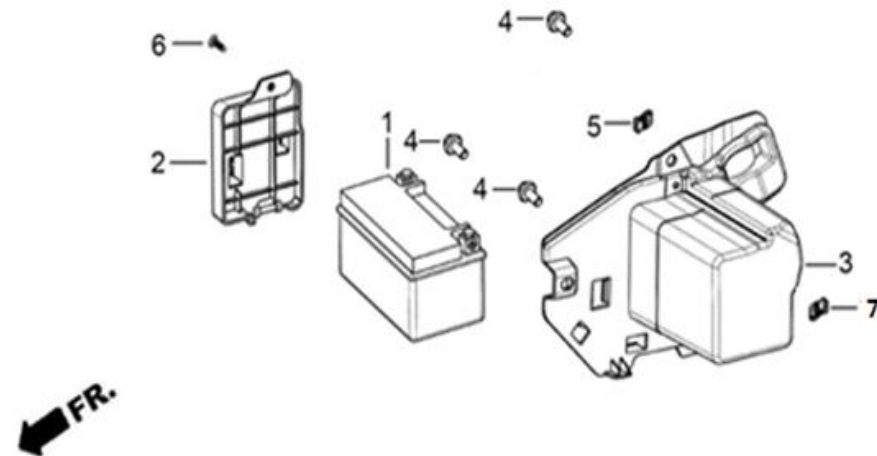
No	Part No	Part description	Q'ty	Notes	Frame No
1	VI0149-17008	CASE COMP., UPPER HALF CHAIN	1		
2	W5328203		2		
3	VGA001-01300	CHAIN	1		
4	VHB042-26100A-0229	FORK,REAR	1		
5	ZDG001-26200	SLEEVE	2		
6	VI0149-26001	PIVOT,RR.FORK	1		
7	NW5331203		1		
8	VI0106-01101	NUT,HEX,10×1.25	1		
9	VGB993-01033	PROTECTOR,CHAIN	1		
10	W5326007		1		
11	W5365102		2		
12	ZFB001-26001	BAR,REAR BRAKE STOP	1		
13	VGA001-01071	WASHER,8	1		
14	W5365104	WASHER 8	1		
15	W5336205	NUT M8	1		
16	W5338103	PIN SPLIT 2×20	1		
17	VI0149-02030		1		
18	ZJ0038-02003		1		
19	VI0149-02020		1		
20	NW5321025		1		

F-23	REAR CUSHION				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	VI0149-30	REAR CUSHION	1		
2	ZDG001-01106		2		
3	W5365106	WASHER 10	5		
4	W5336301	NUT 10×1.25	2		
5	W5366109	WASHER,PLAIN 12	5		
6	VHK027-02001		1		

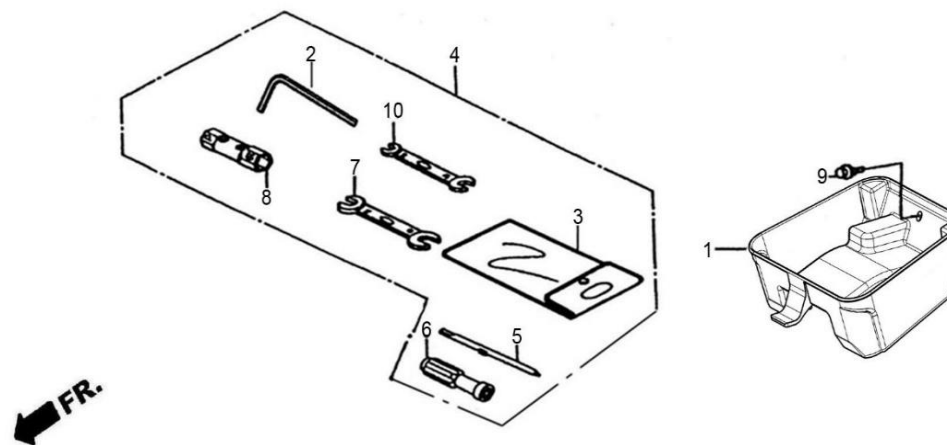


No	Part No	Part description	Q'ty	Notes	Frame No
1	VI0149-17602-0050	REAR MUDGUARD REAR PART	1		
2	VIB995-17170-0050	REAR REFLECTOR ASSEMBLY	1		
3	W5336501	HEXAGON FLANGE NUT M5	1		
4	/	/	/		
5	/	/	/		
6	/	/	/		
7	VI0149-89-0051	REAR LICENSE PLATE LIGHT	1		
8	W5336501	HEXAGON FLANGE NUT M5	2		
9	VI0136-88000A	TAILLIGHT (LED)	1		
10	NW5311311	SELF-TAPPING SCREW ST4.2*12(φ11)	4		
11	VI0149-17601	REAR MUDGUARD FRONT PART			
12	TG0003-17905A	SPRING CLIP	4		
13	W5365102	LARGE WASHER GB96-87 φ6	2		
14	W5326007	FLANGE BOLT GB5787 6*18	2		
15	VGA001-01109	BOLT 6*14	1		
16	W5326003	FLANGE BOLT WHITE ZINC GB5787 6*12	2		
17	NW5331308	HEXAGON FLANGE NUT M6	2		
18	W8018862	WIRE CLIP	3		

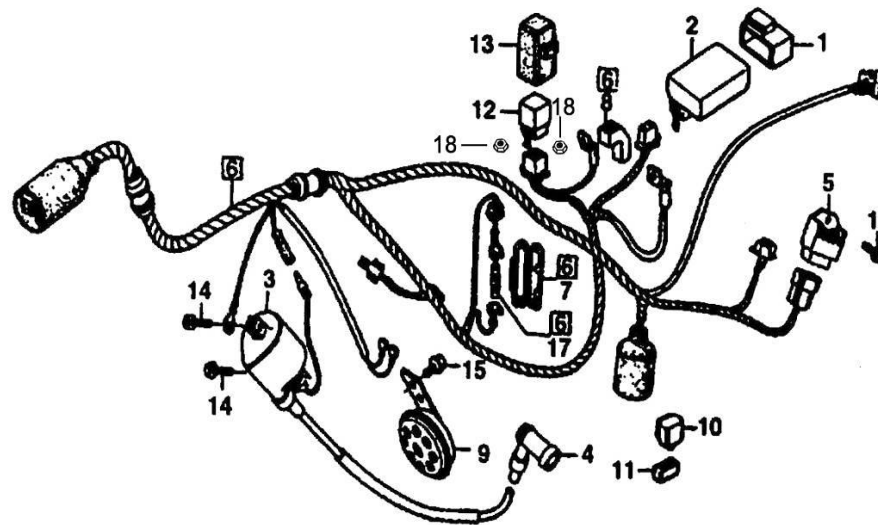
F-25	BATTERY	ENZO110
------	---------	---------



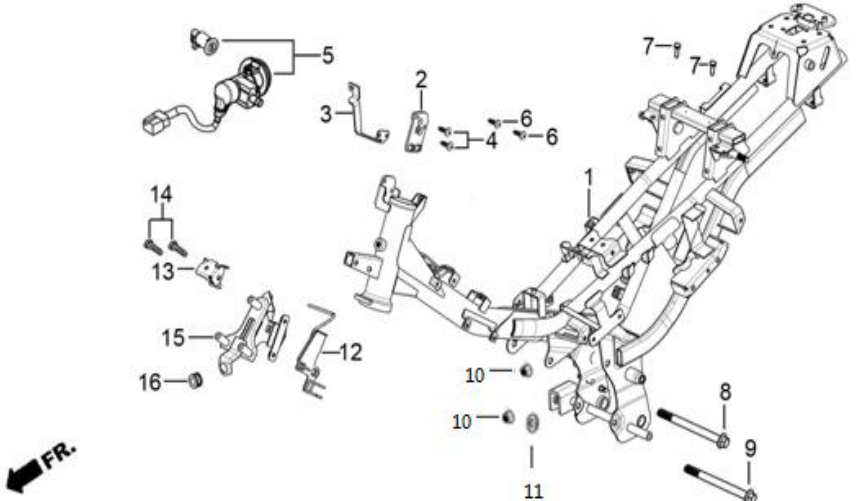
No	Part No	Part description	Q'ty	Notes	Frame No
1	NTIP001-78-0052	BATTERY	1		
2	VI0149-17402	BATTERY BOX COVER	1		
3	VI0149-17401	BATTERY BOX	1		
4	VGA001-01109	BOLT 6*14	3		
5	TG0003-17905A	SPRING CLIP	1		
6	NW5311317	SELF-TAPPING SCREW ST4.8*12	1		
7	VGA001-01119	CLAMPING NUT M6	1		

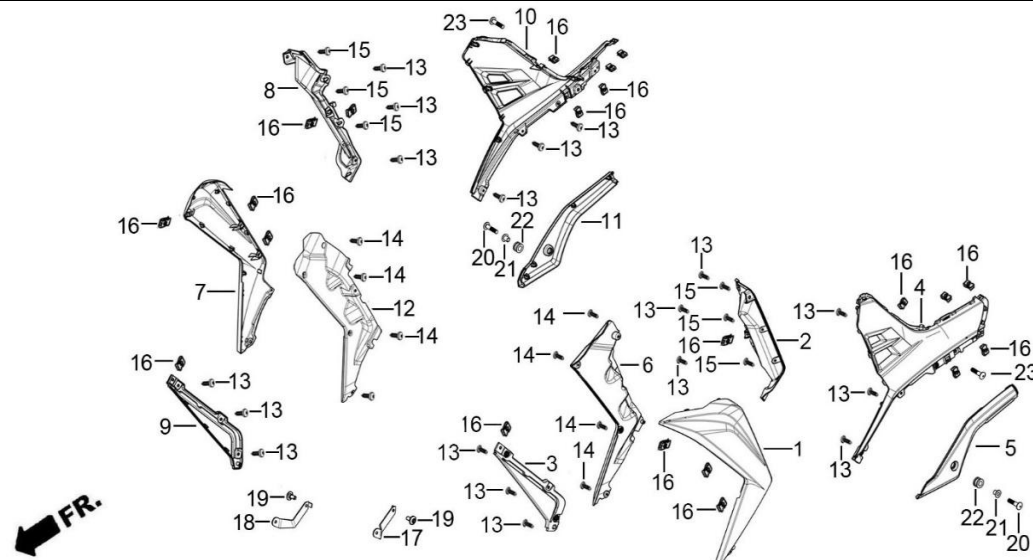


No	Part No	Part description	Q'ty	Notes	Frame No
1	VH0063-17048	BOX,TOOL	1		
2		ALLEW WRENCH	1		
3		BAG,TOOL	1		
4	VGA001-31000B-0050	TOOLS	1		
5		BAR,SCREW	1		
6		HANDLEBAR,SCREW	1		
7		WRENCH,OPEN,14×17	1		
8		WRENCH,UNIVERSAL SOCKET	1		
9	VGA001-01109	BOLT FLANGE 6*12	1		
10		WRENCH,OPEN,10×12	1		

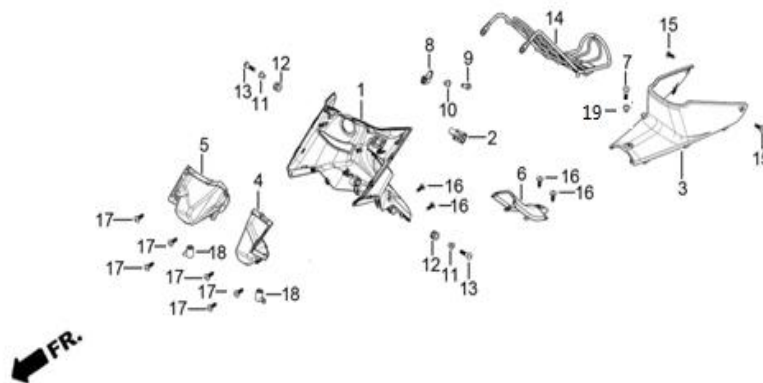


No	Part No	Part description	Q'ty	Notes	Frame No
1		SUSPEND SLEEVE, CDI UNIT	1		
2	VI0001-82	CDI UNIT	1		
3	VHC997-81	COIL, IGNITION	1		
4	VGB001-81100-0052	CAP ASSY., NOISE SUPPRESSOR	1		
5	ZJH001-85000A	RECTIFIER, REGULATOR	1		
6	VI0136-77000B	HARNESS, WIRE	1		
7		FUSE CASE	1		
8		COVER, BATTERY TERMINAL	1		
9	VH0278-70000A	HORN	1		
10	ZJ0038-79000A	RELAY CPMP., FLASH	1		
11		SUSPEND SLEEVE, FLASH RELAY	1		
12	VHC080-80-0050	RELAY, STARTING	1		
13		HANGER, STARTING RELAY	1		
14	W5313109	SCREW, 5×20	2		
15	W5328203	BOLT, 6×10	1		
16	W5326008	SCREW, 6×20	2		
17	VGA001-77001	FUSE	1		
18	W5336203	NUT M6	2		

F-28	FRAME BODY				ENZO110
					
No	Part No	Part description	Q'ty	Notes	Frame No
1	VI0136-37000A-0229	BODY COMP.,FRAME	1		
2	VI0149-02010	IGNITION SWITCH ADAPTER PLATE	1		
3	VI0149-02006	IGNITION SWITCH TENSION PLATE	1		
4	ZDG001-01104	SELF-LOCKING SCREW	2		
5	VHC046-74005A	START SWITCH	1		
6	NW5311213	CROSS RECESS PAN HEAD SCREW M6*16	4		
7	/	ALUMINUM NAMEPLATE RIVET GB827-76 2*6	2		
8	ZDG001-01101	FIXING BOLT,ENGINE UPPER	1		
9	VGB001-01102	FIXING BOLT,ENGINE UNDER	1		
10	W5336205	NUT HEX 8	2		
11	W5361103	SPRING WASHER GB93-85 φ8	1		
12	VI0149-01066	WIRE CLIP BRACKET ASSEMBLY	1		
13	/	HORN BRACKET ASSEMBLY	1		
14	W5326029	FLANGE BOLT GB5787 8*35	2		
15	VI0149-02300A	FRONT PANEL BRACKET ASSEMBLY	1		
16	VGB001-17051	RUBBER RING	1		



No	Part No	Part description	Q'ty	Notes	Frame No
1	VI0149-17921-**	LEFT WINDSHIELD	1	PAINTED PART	
2	VI0149-17922	LEFT WINDSHIELD CONNECTING PLATE	1	SILVER	
3	VI0149-17923	LEFT WINDSHIELD DECORATIVE PART	1		
4	VI0149-17924	LEFT GRILLE	1	SILVER	
5	VI0149-17925	LEFT PROTECTIVE STRIP	1		
6	VI0149-17926A	LEFT WINDSHIELD LINING	1		
7	VI0149-17931-**	RIGHT WINDSHIELD	1	PAINTED PART	
8	VI0149-17932	RIGHT WINDSHIELD CONNECTING PLATE	1	SILVER	
9	VI0149-17933	RIGHT WINDSHIELD DECORATIVE PART	1		
10	VI0149-17934	RIGHT GRILLE	1	SILVER	
11	VI0149-17935	RIGHT PROTECTIVE STRIP	1		
12	VI0149-17936A	RIGHT WINDSHIELD LINING	1		
13	NW5311311	SELF-THREADING SCREW ST4.2*12 (φ11)	32		
14	NW5311318	SELF-THREADING SCREW ST4.8*16	8		
15	W5311317	SELF-THREADING SCREW ST4.8*12	2		
16	TG0003-17905A	SPRING CLIP	20		
17	VG0224-02050	LEFT WINDSHIELD SUPPORT ASSEMBLY	1		
18	VG0224-02060	RIGHT WINDSHIELD SUPPORT ASSEMBLY	1		
19	W5324006	HEXAGON HEAD BOLT FULL THREAD GB5783 6*16	2		
20	VHB001-011042-0060	STAINLESS STEEL INNER HEXAGON SCREW 6*22	2		
21	ZJ0049-01091	FRONT MUD LINER SLEEVE	2		
22	ZJ0049-17006	FRONT MUD RUBBER PAD	2		
23	W5326007	FLANGE BOLT GB5787 6*18	2		



No	Part No	Part description	Q'ty	Notes	Frame No
1	VI0149-17861B-XX	MAIN COVER FRONT PART	1		
2	VI0149-98	USB CHARGING PORT	1		
3	VI0149-17801B-XX	CENTER COVER	1		
4	VI0149-17862-XX	LEFT STORAGE BOX OF MAIN COVER	1		
5	VI0149-17863-XX	RIGHT STORAGE BOX OF MAIN COVER	1		
6	VI0149-17864-XX	MAIN COVER REAR PART	1		
7	VHB001-011042-0060	STAINLESS STEEL INNER HEXAGON SCREW 6*22	1		
8	TG0003-17304	HELMET HOOK	1		
9	W5326007	FLANGE BOLT GB5787 6*18	1		
10	TG0003-02099	BUSHING	1		
11	VH0116-01065A	FRONT COVER BUSHING	2		
12	VH0116-01068	FRONT COVER RUBBER SLEEVE	2		
13	ZGK998-010992-0060	STAINLESS STEEL INNER HEXAGON SCREW 6*33	2		
14	/	CENTER RACK	1		
15	VHC997-01108	SELF-THREADING SCREW ST4.2*9	2		
16	VGB001-011121	SELF-THREADING SCREW 4.8*12	4		
17	NW5311311	SELF-THREADING SCREW ST4.2*12 (φ11)	6		
18	VI0149-17101	DRAIN HOLE RUBBER SLEEVE	2		
19	VH0078-17017	FRONT MUD LINER SLEEVE	1		